

ROBOTICS

Product specification

IRB 1200



Trace back information:
Workspace 21D version a10
Checked in 2021-12-06
Skribenta version 5.4.005

Product specification

IRB 1200-5/0.9

IRB 1200-7/0.7

IRC5

Document ID: 3HAC046982-001

Revision: Q

The information in this manual is subject to change without notice and should not be construed as a commitment by ABB. ABB assumes no responsibility for any errors that may appear in this manual.

Except as may be expressly stated anywhere in this manual, nothing herein shall be construed as any kind of guarantee or warranty by ABB for losses, damage to persons or property, fitness for a specific purpose or the like.

In no event shall ABB be liable for incidental or consequential damages arising from use of this manual and products described herein.

This manual and parts thereof must not be reproduced or copied without ABB's written permission.

Keep for future reference.

Additional copies of this manual may be obtained from ABB.

Original instructions.

© Copyright 2014-2021 ABB. All rights reserved.
Specifications subject to change without notice.

Table of contents

| | |
|--|-----------|
| Overview of this specification | 7 |
| 1 Description | 9 |
| 1.1 Structure | 9 |
| 1.1.1 Introduction to structure | 9 |
| 1.1.2 The robot | 13 |
| 1.2 Standards | 18 |
| 1.2.1 Applicable standards | 18 |
| 1.3 Installation | 20 |
| 1.3.1 Introduction to installation | 20 |
| 1.3.2 Operating requirements | 21 |
| 1.3.3 Mounting the manipulator | 22 |
| 1.4 Load diagram | 25 |
| 1.4.1 Introduction to load diagram | 25 |
| 1.4.2 Load diagram | 26 |
| 1.4.3 Maximum load and moment of inertia for axis 5 | 30 |
| 1.4.3.1 Maximum TCP acceleration | 32 |
| 1.5 Fitting of equipment | 33 |
| 1.5.1 Introduction to fitting of equipment | 33 |
| 1.5.2 Holes for fitting extra equipment | 34 |
| 1.6 Calibration | 41 |
| 1.6.1 Calibration methods | 41 |
| 1.6.2 Fine calibration | 44 |
| 1.6.3 Absolute Accuracy calibration | 45 |
| 1.7 Maintenance and troubleshooting | 47 |
| 1.7.1 Introduction to maintenance and trouble shooting | 47 |
| 1.8 Robot motion | 48 |
| 1.8.1 Working range and type of motion | 48 |
| 1.8.2 Performance according to ISO 9283 | 51 |
| 1.8.3 Velocity | 52 |
| 1.8.4 Robot stopping distances and times | 53 |
| 1.9 Customer connections | 54 |
| 2 Specification of variants and options | 57 |
| 2.1 Manipulator | 57 |
| 3 Accessories | 63 |
| 3.1 Introduction to accessories | 63 |
| Index | 65 |

This page is intentionally left blank

Overview of this specification

About this product specification

This product specification describes the performance of the manipulator or a complete family of manipulators in terms of:

- The structure and dimensional prints
- The fulfilment of standards, safety, and operating equipment
- The load diagrams, mounting or extra equipment, the motion, and the robot reach
- The specification of available variants and options

The specification covers the manipulator using the IRC5 controller.

Usage

Product specifications are used to find data and performance about the product, for example to decide which product to buy. How to handle the product is described in the product manual.

The specification is intended for:

- Product managers and product personnel
- Sales and marketing personnel
- Order and customer service personnel

References

| Reference | Document ID |
|--|----------------|
| <i>Product manual - IRB 1200</i> | 3HAC046983-001 |
| <i>Product manual, spare parts - IRB 1200</i> | 3HAC046984-001 |
| <i>Product manual - IRC5 Compact</i> | 3HAC035738-001 |
| <i>Product specification - Robot user documentation, IRC5 with RobotWare 6</i> | 3HAC052355-001 |

Revisions

| Revision | Description |
|----------|--|
| - | New product specification |
| A | Minor corrections |
| B | <ul style="list-style-type: none"> • Working range of axis 6 corrected from $\pm 360^\circ$ to $\pm 400^\circ$, see Working range on page 49. • Minor corrections/update |
| C | <ul style="list-style-type: none"> • Minor corrections/update |
| D | <ul style="list-style-type: none"> • Food grade lubrication option added. • Maximum revolution of axis 6 corrected to ± 242, see Robot motion on page 48. |

Continues on next page

| Revision | Description |
|----------|--|
| E | Published in release R16.2. The following updates are done in this revision: <ul style="list-style-type: none"> • Recommendation of fitting a fuse protector for customer protection added. See Customer connections on page 54. • Foundry Plus option added. • Type A robot information added due to new standard calibration method (Axis Calibration). |
| F | Published in release R17.1. The following updates are done in this revision: <ul style="list-style-type: none"> • Added the standard IEC 61340-5-1:2010, see Applicable standards on page 18. • A warning label about CP/CS connection provided on the tubular housing. See Customer connections on page 54. • Information about <i>Type B</i> robots supporting SafeMove 2 added. • <i>Absolute Accuracy</i> calibration added. • Restriction of load diagram added. |
| G | Published in release 17.2. The following updates are done in this revision: <ul style="list-style-type: none"> • Updated list of applicable standards. • Changed the protection type of Food grade lubrication. • Updated description about Clean Room class. |
| H | Published in release 18.1. The following updates are done in this revision: <ul style="list-style-type: none"> • TCP acceleration should be presented by RobotStudio. • Note added to clarify the usage of the two M4 thread holes on the upper arm. |
| J | Published in release R18.2. The following updates are done in this revision: <ul style="list-style-type: none"> • TCP acceleration information updated. • Customer connector information added. |
| K | Published in release 19B. The following updates are done in this revision: <ul style="list-style-type: none"> • Velocity data updated. • Updated information about <i>Absolute Accuracy</i>. |
| L | Published in release 19C. The following updates are done in this revision: <ul style="list-style-type: none"> • Note added about need to calibrate if the robot is other than floor mounted. |
| M | Published in release 20C. The following updates are done in this revision: <ul style="list-style-type: none"> • Updated the figure of customer connection information. |
| N | Published in release 20D. The following updates are done in this revision: <ul style="list-style-type: none"> • Warranty section updated. |
| O | Published in release 21A. The following updates are done in this revision: <ul style="list-style-type: none"> • The color code for Graphite White, option 209-202 updated. |
| P | Published in release 21B. The following updates are done in this revision: <ul style="list-style-type: none"> • Modified the air hose diameter description. • Text regarding fastener quality is updated. • Removed Axis resolution. |
| Q | Published in release 21D. The following updates are done in this revision: <ul style="list-style-type: none"> • Hygienic option [287-13] added . • Removed the introduction to type A and type B. • Minor changes. |

1 Description


1.1 Structure

1.1.1 Introduction to structure

General

The IRB 1200 is one of ABB Robotics latest generation of 6-axis industrial robot, with a payload of 5 to 7 kg, designed specifically for manufacturing industries that use flexible robot-based automation, e.g. 3C industry. The robot has an open structure that is especially adapted for flexible use, and can communicate extensively with external systems.

Clean room robots

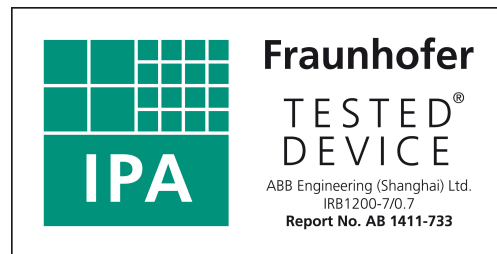

xx2100002284

Particle emission from the robot fulfill Clean room class 3 standard according to DIN EN ISO 14644-1.

Clean room robots are specially designed to work in a clean room environment. According to IPA test result, the robot IRB 1200 is suitable for use in clean room environments.

Clean room robots are designed in order to prevent from particle emission from the robot. For example is, frequent maintenance work possible to perform without cracking the paint. The robot is painted with four layers of polyurethane paint. The last layer being a varnish over labels in order to simplify cleaning. The paint has been tested regarding outgassing of Volatile Organic Compounds (VOC) and been classified in accordance with ISO 14644-8.

Classification of airborne molecular contamination, see below:

| Parameter | | | | Outgassing amount | | |
|------------------------|-------------------|-----------|----------------|---------------------|---|---|
| Area (m ²) | Test duration (s) | Temp (°C) | Performed test | Total detected (ng) | Normed based on 1m ² and 1s(g) | Classification in accordance to ISO 14644-8 |
| 4.5E-03 | 3600 | 23 | TVOC | 2848 | 1.7E-07 | -6.8 |
| 4.5E-03 | 60 | 90 | TVOC | 46524 | 1.7E-04 | -3.8 |

Classification results in accordance with ISO 14644-8 at different test temperatures.

Continues on next page

1 Description

1.1.1 Introduction to structure

Continued

Food grade lubrication

The robot has food grade lubrication (NSF H1) as an option (777-1).

The protection type for robots with food grade lubrication is Clean Room and IP67.

Hygienic

The robot has Hygienic as an option. Robots with the option Hygienic are equipped with special sealings and coatings, and a special axes 6 stainless steel body and tool flange. The protection type for robot with hygienic is Food grade lubrication, IP67, IP69k (max.30bar) on axis 6 flange.

IP67/66 protection

The robot has IP67 as an option. The option will add sealing, machining parts and gasket.

Protection type Foundry Plus 2

Robots with the option Foundry Plus 2 are designed for harsh environments where the robot is exposed to sprays of coolants, lubricants and metal spits that are typical for die casting applications or other similar applications.

Typical applications are spraying insertion and part extraction of die-casting machines, handling in sand casting and gravity casting, etc. (Please refer to Foundry Prime robots for washing applications or other similar applications). Special care must be taken in regard to operational and maintenance requirements for applications in foundry are as well as in other applications areas. Please contact ABB Robotics Sales organization if in doubt regarding specific application feasibility for the Foundry Plus 2 protected robot.

The robot is painted with two-component epoxy on top of a primer for corrosion protection. To further improve the corrosion protection additional rust preventive are applied to exposed and crucial areas, e.g. has the tool flange a special preventive coating. Although, continuous splashing of water or other similar rust formation fluids may cause rust attach on the robots unpainted areas, joints, or other unprotected surfaces. Under these circumstances it is recommended to add rust inhibitor to the fluid or take other measures to prevent potential rust formation on the mentioned.

The entire robot is IP67 compliant according to IEC 60529 - from base to wrist, which means that the electrical compartments are sealed against water and solid contaminants. Among other things all sensitive parts are better protected than the standard offer.

Selected Foundry Plus 2 features:

- Improved sealing to prevent penetration into cavities to secure IP67
- Additional protection of cabling and electronics
- Special covers that protect cavities
- Well-proven connectors
- Black chrome coated tool flange
- Rust preventives on screws, washers and unpainted/machined surfaces
- Extended service and maintenance program

Continues on next page

The Foundry Plus 2 robot can be cleaned with appropriate washing equipment according to the robot product manual. Appropriate cleaning and maintenance is required to maintain the protection, for example can rust preventive be washed off with wrong cleaning method.

Available robot versions

The option Foundry Plus 2 might not be available for all robot versions.

See [Specification of variants and options on page 57](#) for robot versions and other options not selectable together with Foundry Plus 2.

Operating system

The robot is equipped with the IRC5 Compact (IRC5C) or IRC5 (Single cabinet) controller and robot control software, RobotWare. RobotWare supports every aspect of the robot system, such as motion control, development and execution of application programs, communication etc. See *Product specification - Controller IRC5 with FlexPendant* (IRC5C included).

Safety

The safety standards are valid for the complete robot, manipulator and controller.

Additional functionality

For additional functionality, the robot can be equipped with optional software for application support - for example gluing and welding, communication features - network communication - and advanced functions such as multitasking, sensor control etc. For a complete description on optional software, see *Product specification - Controller software IRC5*


Continues on next page

1 Description

1.1.1 Introduction to structure

Continued

Manipulator axes

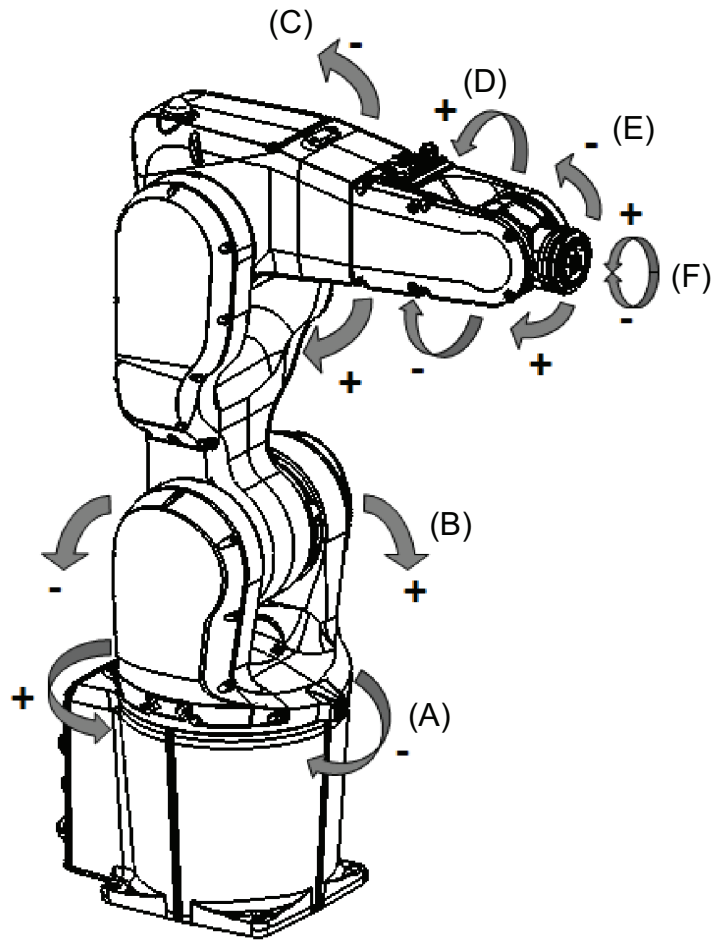

xx130000365

| Position | Description | Position | Description |
|----------|-------------|----------|-------------|
| A | Axis 1 | B | Axis 2 |
| C | Axis 3 | D | Axis 4 |
| E | Axis 5 | F | Axis 6 |

1.1.2 The robot

General

The IRB 1200 is available in two versions and both can be mounted on floor, inverted or on wall in any angle (around X-axis or Y-axis).

| Robot type | Handling capacity (kg) | Reach (m) |
|------------|------------------------|-----------|
| IRB 1200 | 5 kg | 0.9 m |
| IRB 1200 | 7 kg | 0.7 m |

Weight, robot

The table shows the weight of the robot.

| Robot model | Weight |
|-------------|--|
| IRB 1200 | IRB 1200-5/0.9: 54 kg IRB 1200-7/0.7: 52 kg |



Note


The weight does not include tools and other equipment fitted on the robot.

Other technical data

| Data | Description | Note |
|----------------------|----------------------------------|--|
| Airborne noise level | The sound pressure level outside | < 70 dB (A) Leq (acc. to the working space Machinery directive 2006/42/EG) |

Power consumption

| Type of movement | Power consumption (kW) | |
|-----------------------------------|------------------------|-----------------------|
| | IRB 1200-5/0.9 | IRB 1200-7/0.7 |
| ISO Cube Max. velocity | 0.45 kW | 0.39 kW |
| Robot in 0 degree position | IRB 1200-5/0.9 | IRB 1200-7/0.7 |
| Brakes engaged | 0.10 kW | 0.10 kW |
| Brakes disengaged | 0.18 kW | 0.19 kW |

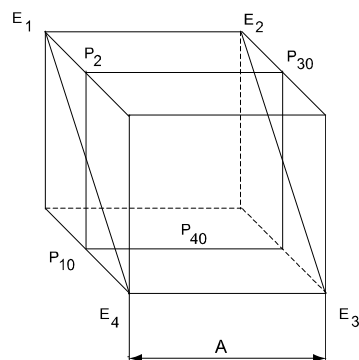

xx0900000265

Continues on next page

1 Description


1.1.2 The robot

Continued

| Position | Description |
|----------|-------------|
| A | 250 mm |

Dimensions IRB 1200-7/0.7

For robots in protection type IP67, Foundry Plus, Clean Room and food grade lubrication robots

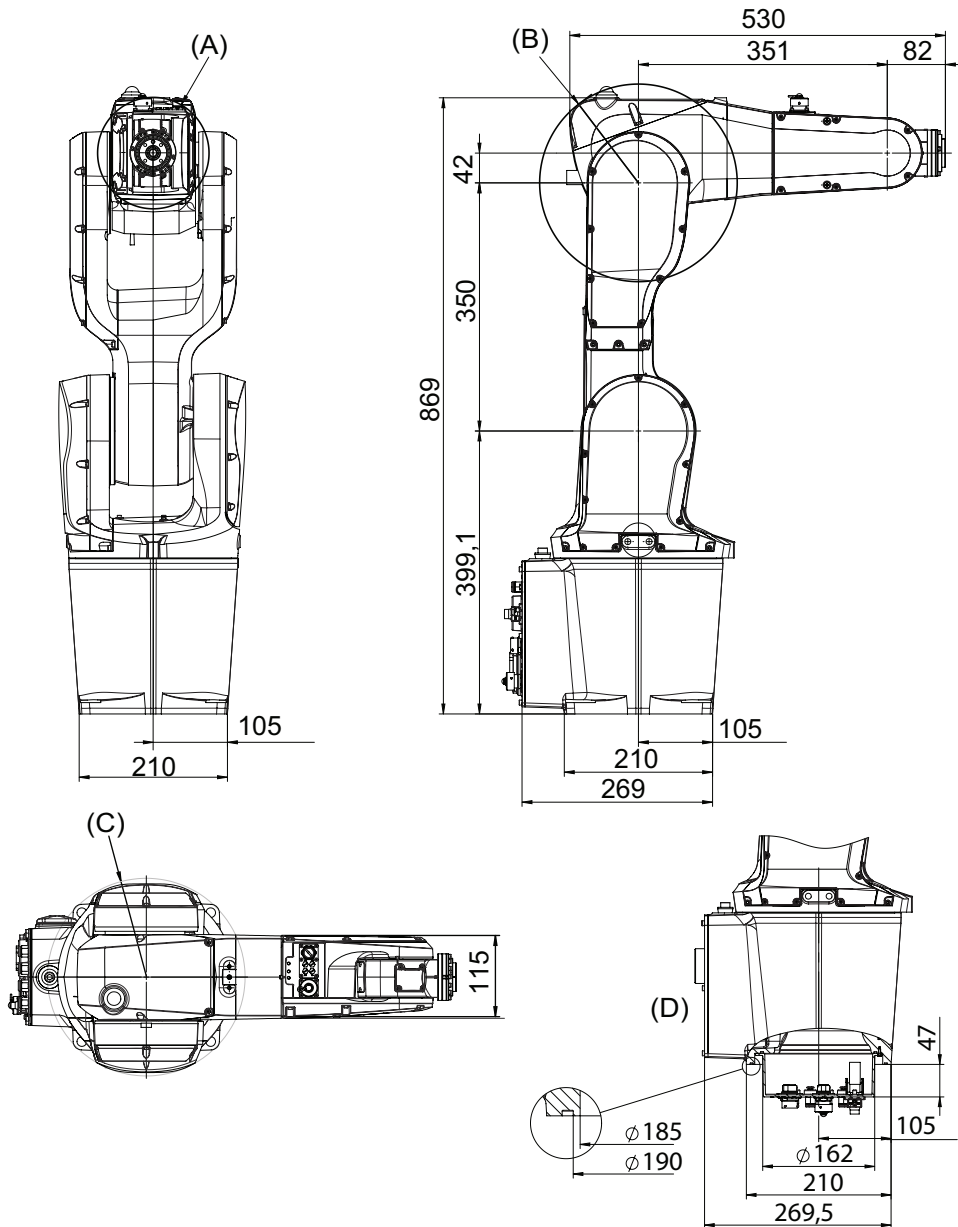

xx1300000366

| Position | Description |
|----------|--|
| A | Minimum turning radius axis 4 R=79 mm |
| B | Minimum turning radius axis 3 R=139 mm |
| C | Minimum turning radius axis 1 R=138 mm |
| D | Valid for option Robot cabling routing, 966-1 From below |


Continues on next page

1 Description

1.1.2 The robot

Continued

For robots in protection type Hygienic

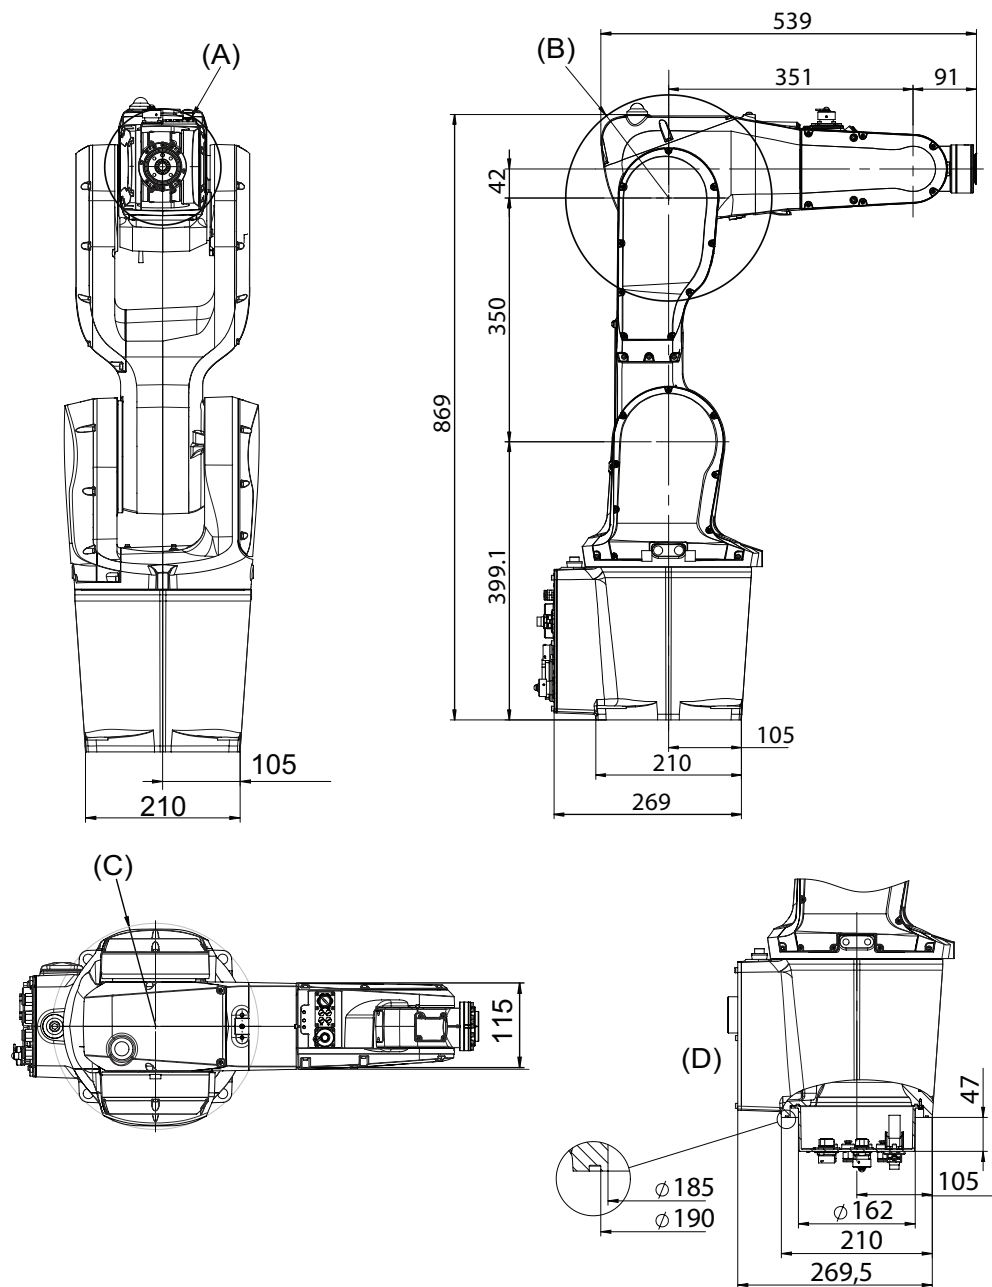

xx2100001277

| Position | Description |
|----------|--|
| A | Minimum turning radius axis 4 R=79 mm |
| B | Minimum turning radius axis 3 R=139 mm |
| C | Minimum turning radius axis 1 R=138 mm |
| D | Valid for option Robot cabling routing, 966-1 From below |

Continues on next page


1 Description

1.1.2 The robot

Continued

Dimensions IRB 1200-5/0.9

For robots in protection type IP67, Foundry Plus, Clean Room and food grade lubrication robots

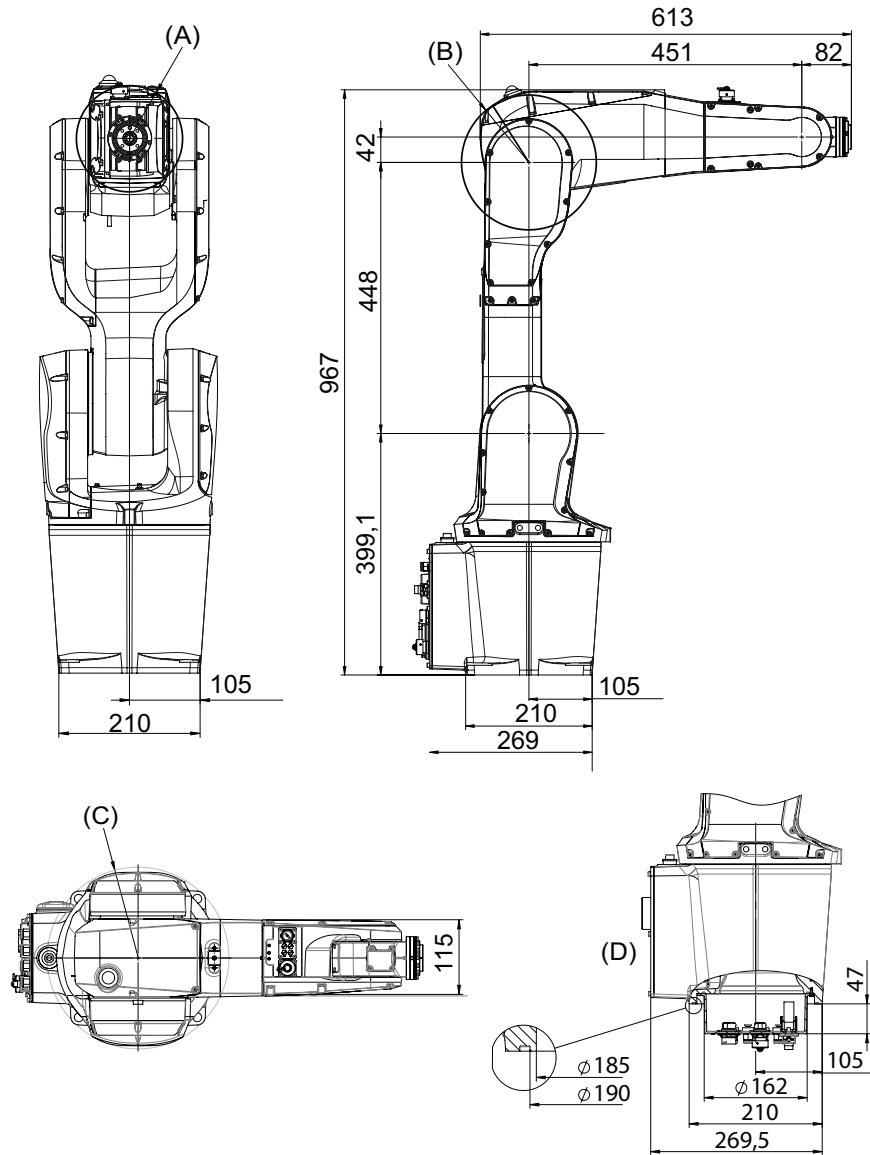

xx1400000339


| Pos | Description |
|-----|--|
| A | Minimum turning radius axis 4 R=79 mm |
| B | Minimum turning radius axis 3 R=111 mm |
| C | Minimum turning radius axis 1 R=138 mm |
| D | Valid for option Robot cabling routing, 966-1 From below |

Continues on next page

1 Description

1.1.2 The robot Continued

For robots in protection type Hygienic

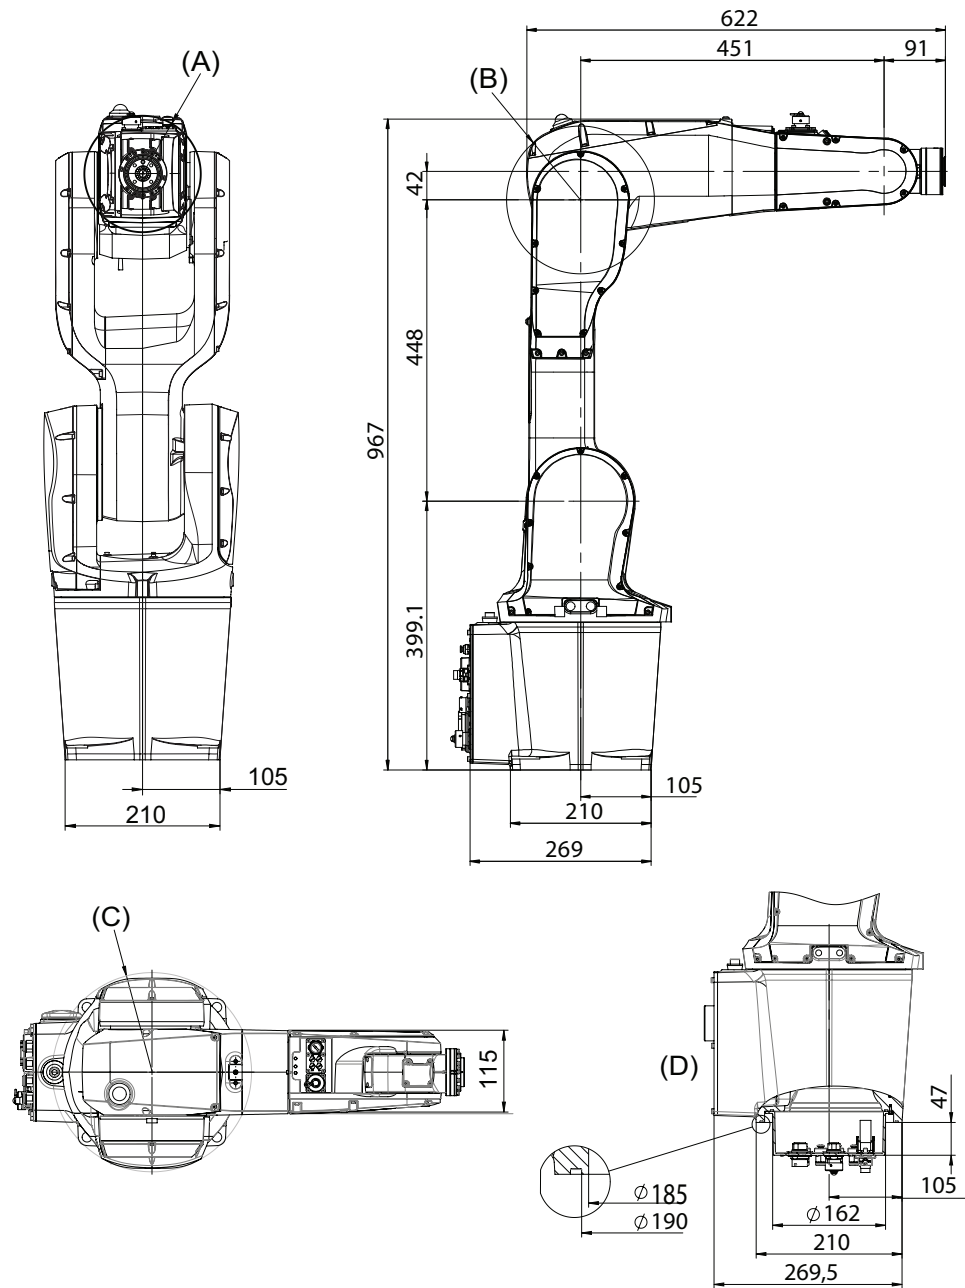

xx2100001278

| Position | Description |
|----------|--|
| A | Minimum turning radius axis 4 R=79 mm |
| B | Minimum turning radius axis 3 R=139 mm |
| C | Minimum turning radius axis 1 R=138 mm |
| D | Valid for option Robot cabling routing, 966-1 From below |

1 Description

1.2.1 Applicable standards

1.2 Standards

1.2.1 Applicable standards



Note

The listed standards are valid at the time of the release of this document. Phased out or replaced standards are removed from the list when needed.

General

The product is designed in accordance with ISO 10218-1:2011, Robots for industrial environments - Safety requirements -Part 1 Robots, and applicable parts in the normative references, as referred to from ISO 10218-1:2011. In case of deviations from ISO 10218-1:2011, these are listed in the declaration of incorporation which is part of the product delivery.

Normative standards as referred to from ISO 10218-1

| Standard | Description |
|------------------|--|
| ISO 9283:1998 | Manipulating industrial robots - Performance criteria and related test methods |
| ISO 10218-2 | Robots and robotic devices - Safety requirements for industrial robots - Part 2: Robot systems and integration |
| ISO 12100 | Safety of machinery - General principles for design - Risk assessment and risk reduction |
| ISO 13849-1:2006 | Safety of machinery - Safety related parts of control systems - Part 1: General principles for design |
| ISO 13850 | Safety of machinery - Emergency stop - Principles for design |
| IEC 60204-1 | Safety of machinery - Electrical equipment of machines - Part 1: General requirements |

Region specific standards and regulations

| Standard | Description |
|------------------------------------|--|
| ANSI/RIA R15.06 | Safety requirements for industrial robots and robot systems |
| ANSI/UL 1740 (option 429-1) | Safety standard for robots and robotic equipment |
| CAN/CSA Z 434-03 (option 429-1) | Industrial robots and robot Systems - General safety requirements |
| ANSI/ESD S20.20:2007 | Protection of Electrical and Electronic Parts, Assemblies and Equipment (Excluding Electrically Initiated Explosive Devices) |

Other standards used in design

| Standard | Description |
|---------------|---|
| ISO 9787:2013 | Robots and robotic devices -- Coordinate systems and motion nomenclatures |

Continues on next page

1 Description

1.2.1 Applicable standards

Continued

| Standard | Description |
|--------------------------------|---|
| IEC 61000-6-2 | Electromagnetic compatibility (EMC) – Part 6-2: Generic standards – Immunity standard for industrial environments |
| IEC 61000-6-4 | Electromagnetic compatibility (EMC) – Part 6-4: Generic standards – Emission standard for industrial environments |
| ISO 13732-1:2006 | Ergonomics of the thermal environment - Part 1 |
| IEC 60974-1:2012 ⁱ | Arc welding equipment - Part 1: Welding power sources |
| IEC 60974-10:2014 ⁱ | Arc welding equipment - Part 10: EMC requirements |
| ISO 14644-1:2015 ⁱⁱ | Classification of air cleanliness |
| IEC 60529:1989 + A2:2013 | Degrees of protection provided by enclosures (IP code) |
| IEC 61340-5-1:2010 | Protection of electronic devices from electrostatic phenomena - General requirements |

ⁱ Only valid for arc welding robots. Replaces IEC 61000-6-4 for arc welding robots.

ⁱⁱ Only robots with protection Clean Room.

1 Description

1.3.1 Introduction to installation

1.3 Installation

1.3.1 Introduction to installation

General

IRB 1200 is adapted for normal industrial environment. Depending on robot variant, an end effector with max. weight of 5 or 7 kg, including payload, can be mounted on the robot's mounting flange (axis 6). Other equipment, weighing a maximum of 0.3 kg, can be mounted on the upper arm. For more information about mounting of extra equipment, see [Fitting of equipment on page 33](#).

1.3.2 Operating requirements

Protection classes, robot

The table shows the available protection types of the robot, with the corresponding protection class.

| Protection type | Protection class |
|---|---|
| Manipulator, protection type Standard | IP40 IP67 (option 287-10, with IRC5 controllers) |
| Manipulator, protection type Foundry Plus | IP67 (option 287-3) |
| Manipulator, protection type Clean Room | Cleanroom (option 287-1) |
| Manipulator, protection type Hygienic | IP67 IP69K (max.30bar) on axis 6 flange |

Explosive environments

The robot must not be located or operated in an explosive environment.

Working range limitations

EPS will not be selectable. No mechanical limitation.

Ambient temperature

| Description | Protection class | Temperature |
|--|------------------|---|
| Manipulator during operation | Standard | + 5°C ⁱ (41°F) to + 45°C (113°F) |
| Manipulator with food grade lubrication or Hygienic during operation | Option | + 5°C ⁱ (41°F) to + 35°C ⁱⁱ (113°F) |
| For the controller | Standard/Option | See <i>Product specification - Robot user documentation, IRC5 with RobotWare 6.</i> |
| Complete robot during transportation and storage | Standard | - 25°C (-13°F) to + 55°C (131°F) |
| For short periods (not exceeding 24 hours) | Standard | up to + 70°C (158°F) |

- ⁱ At low environmental temperature < 10°C is, as with any other machine, a warm-up phase recommended to be run with the robot. Otherwise there is a risk that the robot stops or run with lower performance due to temperature dependent oil and grease viscosity.
- ⁱⁱ For robots with food grade lubrication and Hygienic, if environment temperature > 35°C, contact ABB for further information.

Relative humidity

| Description | Relative humidity |
|---|----------------------------------|
| Complete robot during operation, transportation and storage | Max. 95% at constant temperature |

1 Description

1.3.3 Mounting the manipulator

1.3.3 Mounting the manipulator

Maximum load

Maximum load in relation to the base coordination system. See Figure below.

Floor mounted

| Force | Endurance load (in operation) | Max. load (emergency stop) |
|-----------|-------------------------------|----------------------------|
| Force xy | ±910 N | ±1620 N |
| Force z | -550 ±980 N | -550 ±1610 N |
| Torque xy | ±570 Nm | ±1550 Nm |
| Torque z | ±280 Nm | ±580 Nm |


Wall mounted

| Force | Endurance load (in operation) | Max. load (emergency stop) |
|-----------|-------------------------------|----------------------------|
| Force xy | ±1210 N | ±1940 N |
| Force z | 0 ±900 N | 0 ±1340 N |
| Torque xy | ±700 Nm | ±1650 Nm |
| Torque z | ±300 Nm | ±610 Nm |

Suspended mounting

| Force | Endurance load (in operation) | Max. load (emergency stop) |
|-----------|-------------------------------|----------------------------|
| Force xy | ±910 N | ±1620 N |
| Force z | +550 ±980 N | +550 ±1610 N |
| Torque xy | ±570 Nm | ±1550 Nm |
| Torque z | ±280 Nm | ±580 Nm |

Continues on next page

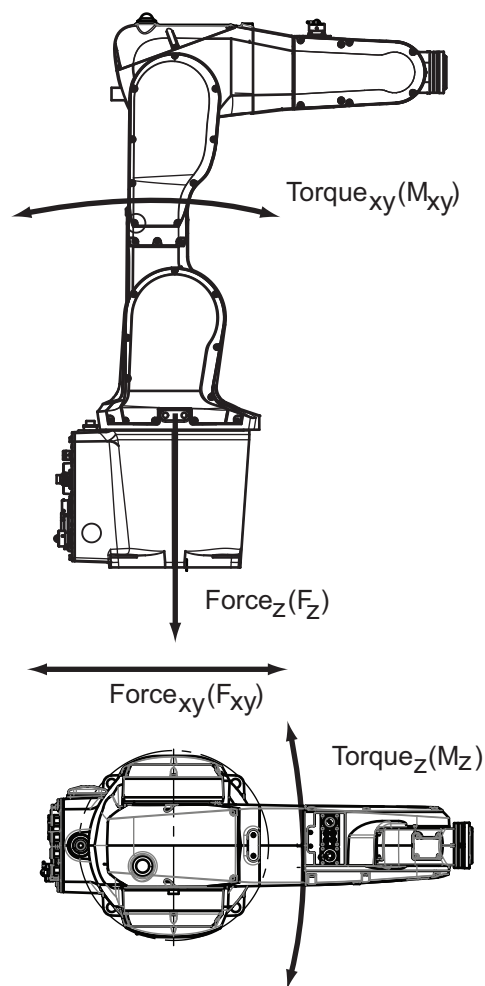

xx130000367

Note regarding M_{xy} and F_{xy}

The bending torque (M_{xy}) can occur in any direction in the XY-plane of the base coordinate system. The same applies to the transverse force (F_{xy}).

Continues on next page


1 Description

1.3.3 Mounting the manipulator

Continued

Fastening holes robot base

View from below.

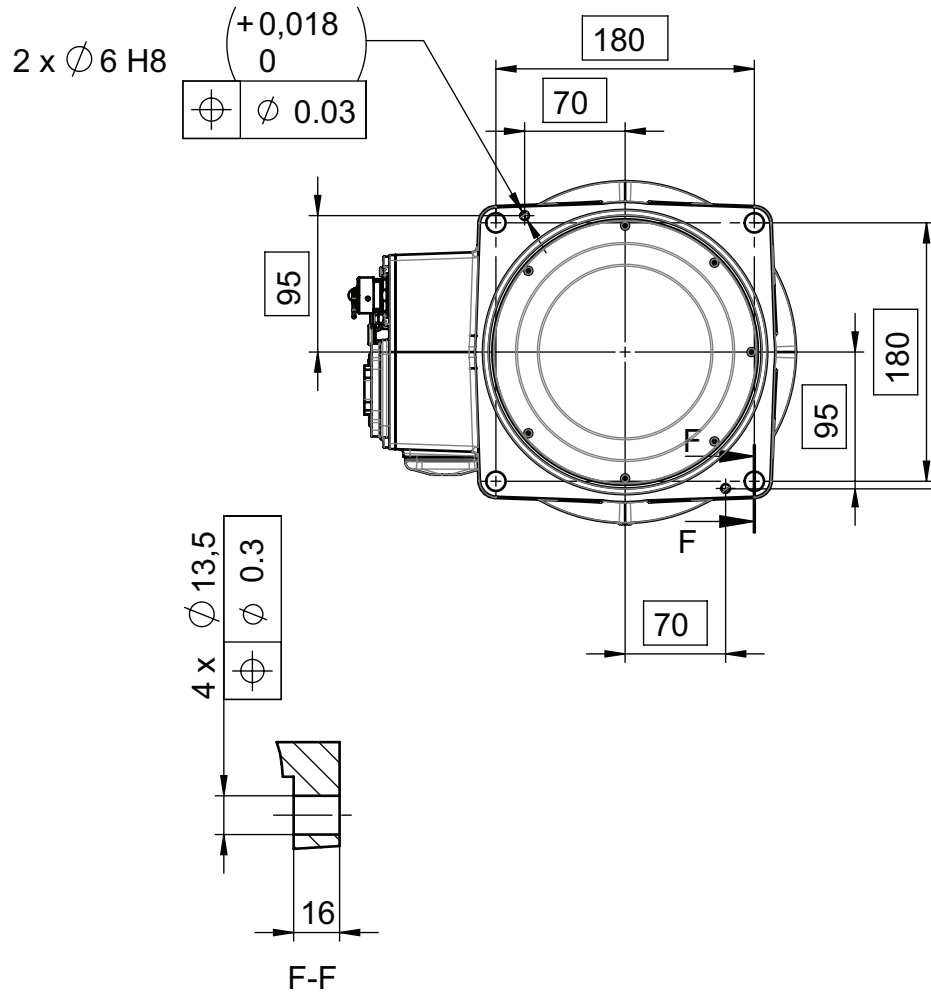

xx1300000368

Attachment bolts, specification

The table specifies the type of securing screws and washers to be used to secure the robot directly to the foundation. It also specifies the type of pins to be used.

| | | | |
|----------------------------|---|--|-----|
| Suitable screws | M12x35 (robot installation directly on foundation) | | |
| Quantity | 4 pcs | | |
| Quality | 8.8 | | |
| Suitable washer | 13 x 20 x 2, steel hardness class 300HV | | |
| Guide pins | 2 pcs, D6x20, ISO 2338 - 6m6x20 - A1 | | |
| Tightening torque | 55 Nm \pm 5 Nm | | |
| Level surface requirements | <table border="1"> <tr> <td></td> <td>0.2</td> </tr> </table> <p>xx0900000643</p> | | 0.2 |
| | 0.2 | | |

1.4 Load diagram

1.4.1 Introduction to load diagram

Information



WARNING

It is very important to always define correct actual load data and correct payload of the robot. Incorrect definitions of load data can result in overloading of the robot.

If incorrect load data is used, and/or if loads outside the load diagram are used, the following parts can be damaged due to overload:

- motors
- gearboxes
- mechanical structure



WARNING

In RobotWare, the service routine LoadIdentify can be used to determine correct load parameters. The routine automatically defines the tool and the load. See *Operating manual - IRC5 with FlexPendant*, for detailed information.



WARNING

Robots running with incorrect load data and/or with loads outside the load diagram, will not be covered by robot warranty.

General

The load diagram includes a nominal payload inertia, J_0 of 0.06 kgm^2 and an extra load of 0.3 kg at the upper arm housing. At different moment of inertia the load diagram will be changed. For robots that are allowed tilted, wall or inverted mounted, the load diagrams as given are valid and thus it is also possible to use RobotLoad within those tilt and axis limits.

Control of load case with RobotLoad

To verify a specific load case, use the RobotStudio add-in RobotLoad.


The result from RobotLoad is only valid within the maximum loads and tilt angles. There is no warning if the maximum permitted arm load is exceeded. For over-load cases and special applications, contact ABB for further analysis.

1 Description

1.4.2 Load diagram

1.4.2 Load diagram


IRB 1200 - 7/0.7

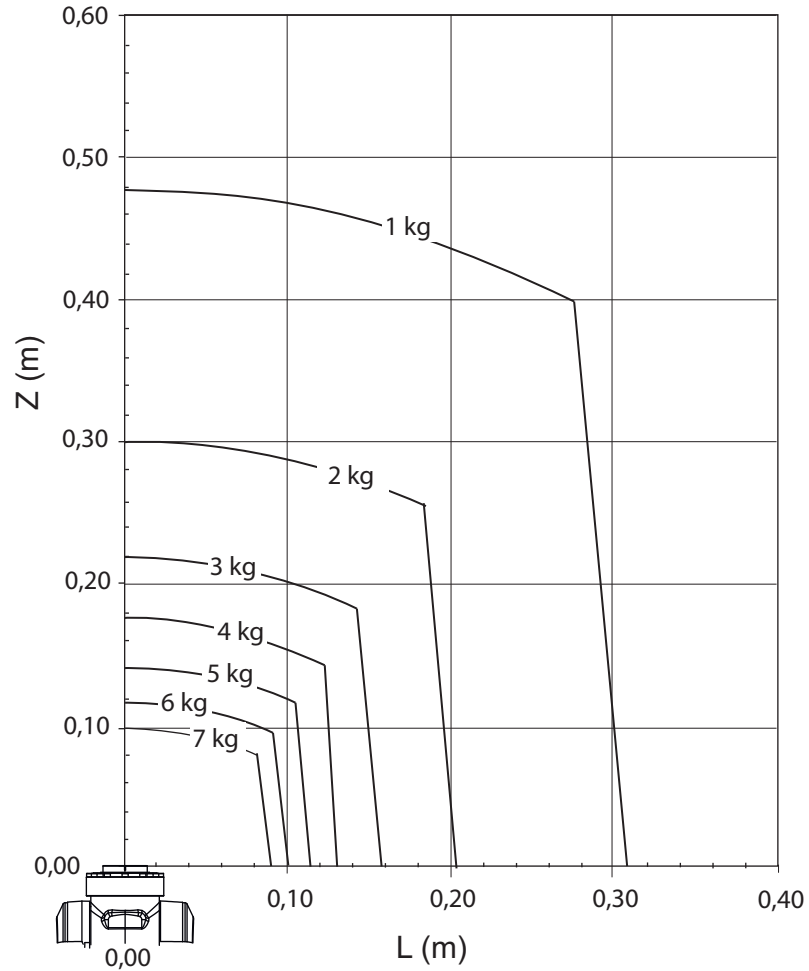

xx130000371

Continues on next page

IRB 1200 - 7/0.7 "Vertical wrist" ($\pm 10^\circ$)

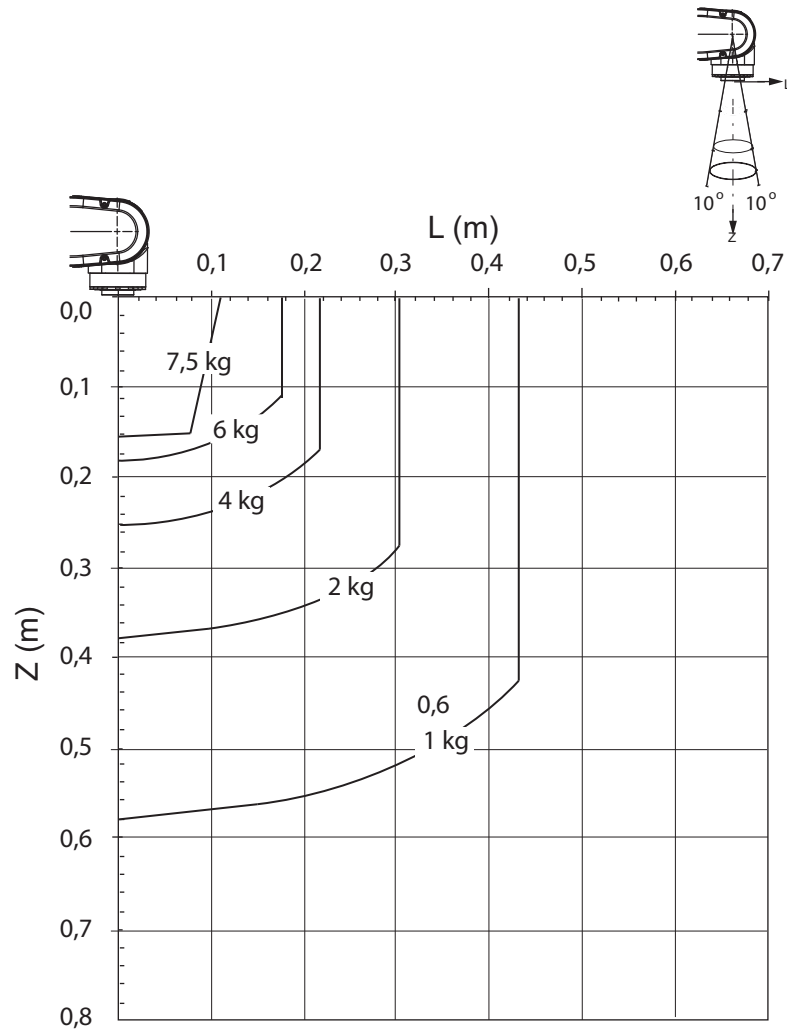

xx130000372

For wrist down (0° deviation from the vertical line).

| | Description |
|------------------|-------------|
| Max load | 7.5 kg |
| Z _{max} | 0.159 m |
| L _{max} | 0.109 m |


Continues on next page

1 Description

1.4.2 Load diagram

Continued


IRB 1200 - 5/0.9

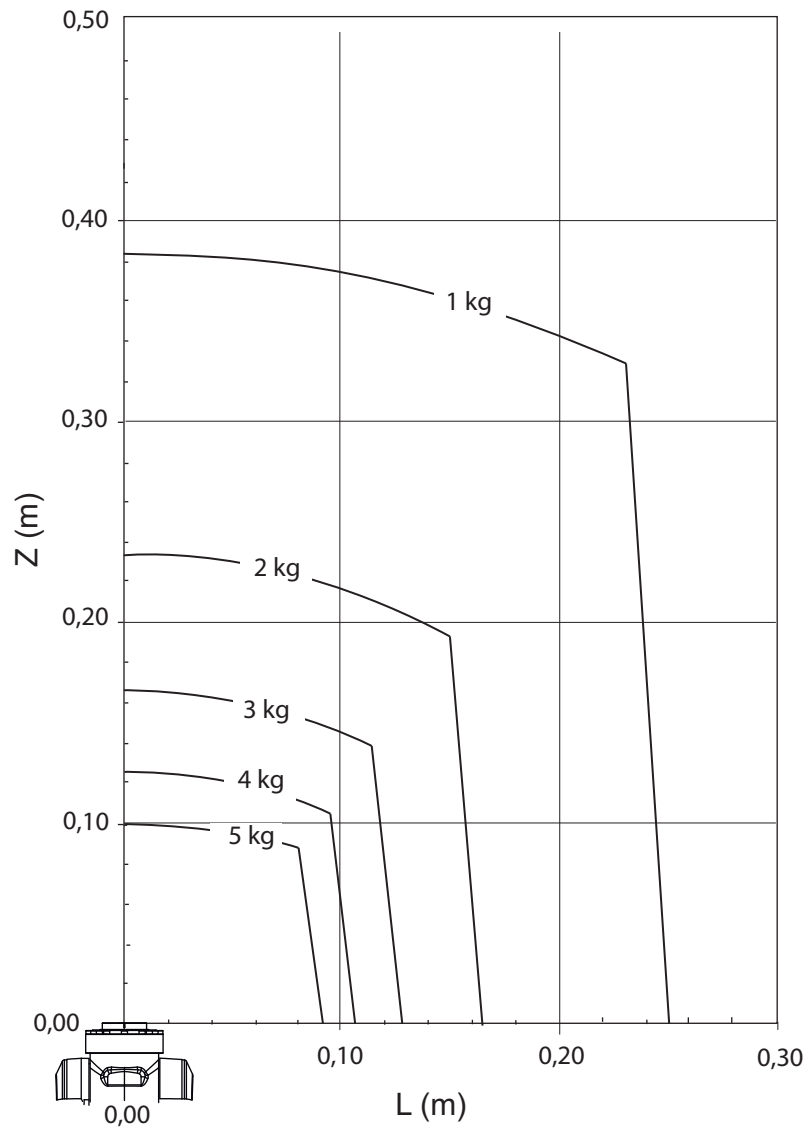

xx1300000369

Continues on next page

IRB 1200 - 5/0.9 "Vertical wrist" ($\pm 10^\circ$)

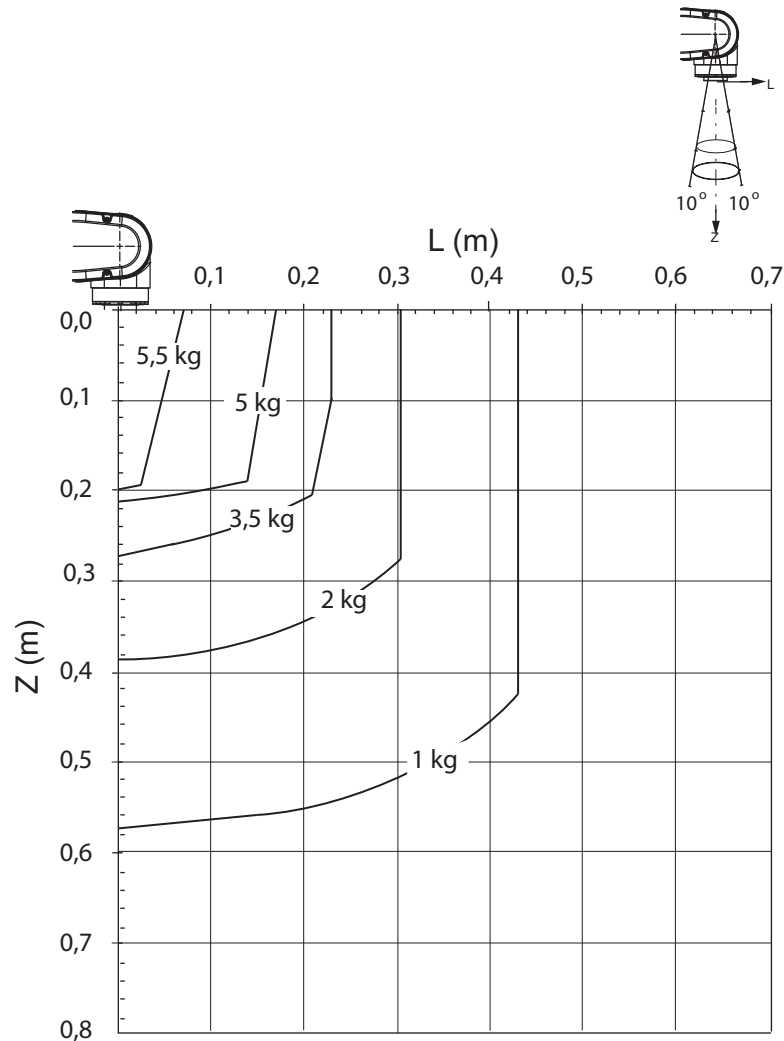

xx130000370

For wrist down (0° deviation from the vertical line).

| | Description |
|------------------|-------------|
| Max load | 5.5 kg |
| Z _{max} | 0.199 m |
| L _{max} | 0.069 m |

1 Description

1.4.3 Maximum load and moment of inertia for axis 5


1.4.3 Maximum load and moment of inertia for axis 5

General

Total load given as: Mass in kg, center of gravity (Z and L) in m and moment of inertia (J_{ox} , J_{oy} , J_{oz}) in kgm^2 . $L = \sqrt{(x_2^2 + y_2^2)}$.

Full movement of Axis 5 ($\pm 130^\circ$)

| Axis | Robot variant | Max. value |
|------|----------------|---|
| 5 | IRB 1200-7/0.7 | $J_5 = \text{Mass} \times ((Z + 0.082)^2 + L^2) + \max(J_{ox}, J_{oy}) \leq 0.45 \text{ kgm}^2$ |
| | IRB 1200-5/0.9 | $J_5 = \text{Mass} \times ((Z + 0.082)^2 + L^2) + \max(J_{ox}, J_{oy}) \leq 0.45 \text{ kgm}^2$ |
| 6 | IRB 1200-7/0.7 | $J_6 = \text{Mass} \times L^2 + J_{oz} \leq 0.2 \text{ kgm}^2$ |
| | IRB 1200-5/0.9 | $J_6 = \text{Mass} \times L^2 + J_{oz} \leq 0.2 \text{ kgm}^2$ |

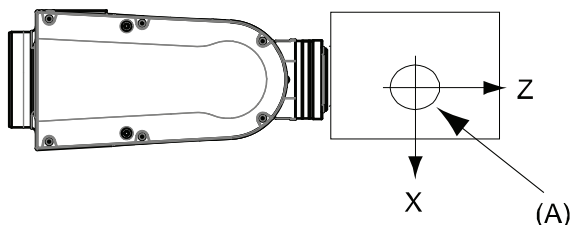


xx1400000342

| Position | Description |
|--------------------------|---|
| A | Center of gravity |
| J_{ox}, J_{oy}, J_{oz} | Max. moment of inertia around the X, Y and Z axes at center of gravity. |

Limited axis 5, center line down

| Axis | Robot variant | Max. value |
|------|----------------|---|
| 5 | IRB 1200-7/0.7 | $J_5 = \text{Mass} \times ((Z + 0.082)^2 + L^2) + \max(J_{ox}, J_{oy}) \leq 0.45 \text{ kgm}^2$ |
| | IRB 1200-5/0.9 | $J_5 = \text{Mass} \times ((Z + 0.082)^2 + L^2) + \max(J_{ox}, J_{oy}) \leq 0.45 \text{ kgm}^2$ |
| 6 | IRB 1200-7/0.7 | $J_6 = \text{Mass} \times L^2 + J_{oz} \leq 0.2 \text{ kgm}^2$ |
| | IRB 1200-5/0.9 | $J_6 = \text{Mass} \times L^2 + J_{oz} \leq 0.2 \text{ kgm}^2$ |

Continues on next page

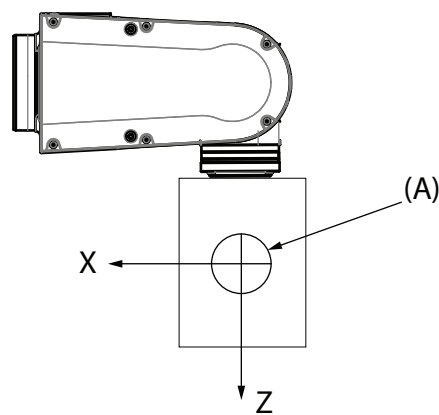

xx140000343

| Pos | Description |
|--------------------------------|---|
| A | Center of gravity |
| J_{ox} , J_{oy} , J_{oz} | Max. moment of inertia around the X, Y and Z axes at center of gravity. |

Wrist torque

The table below shows the maximum permissible torque due to payload.



Note

The values are for reference only, and should not be used for calculating permitted load offset (position of center of gravity) within the load diagram, since those also are limited by main axes torques as well as dynamic loads. Also arm loads will influence the permitted load diagram, contact your local ABB organization.

| Robot variant | Max wrist torque axis 4 and 5 | Max wrist torque axis 6 | Max torque valid at load |
|----------------|-------------------------------|-------------------------|--------------------------|
| IRB 1200-7/0.7 | 12.5 Nm | 6.2 Nm | 7 kg |
| IRB 1200-5/0.9 | 8.9 Nm | 4.4 Nm | 5 kg |

Continues on next page

1 Description

1.4.3.1 Maximum TCP acceleration

1.4.3.1 Maximum TCP acceleration

General

Higher values can be reached with lower loads than the nominal because of our dynamical motion control QuickMove2. For specific values in the unique customer cycle, or for robots not listed in the table below, we recommend then to use RobotStudio.

Maximum Cartesian design acceleration for nominal loads

| Robot type | E-stop Max acceleration at nominal load COG [m/s ²] | Controlled Motion Max acceleration at nominal load COG [m/s ²] |
|----------------|---|--|
| IRB 1200-7/0.7 | 88 | 68 |
| IRB 1200-5/0.9 | 94 | 79 |



Note


Acceleration levels for emergency stop and controlled motion includes acceleration due to gravitational forces. Nominal load is defined with nominal mass and cog with max offset in Z and L (see the load diagram).

1.5 Fitting of equipment

1.5.1 Introduction to fitting of equipment

General

Extra loads can be mounted on to the upper arm. Definitions of load area and permitted load are shown in figure below. The center of gravity of the extra load shall be within the marked load areas. The robot is supplied with holes for fitting of extra equipment. (See [Holes for fitting extra equipment on page 34](#)).

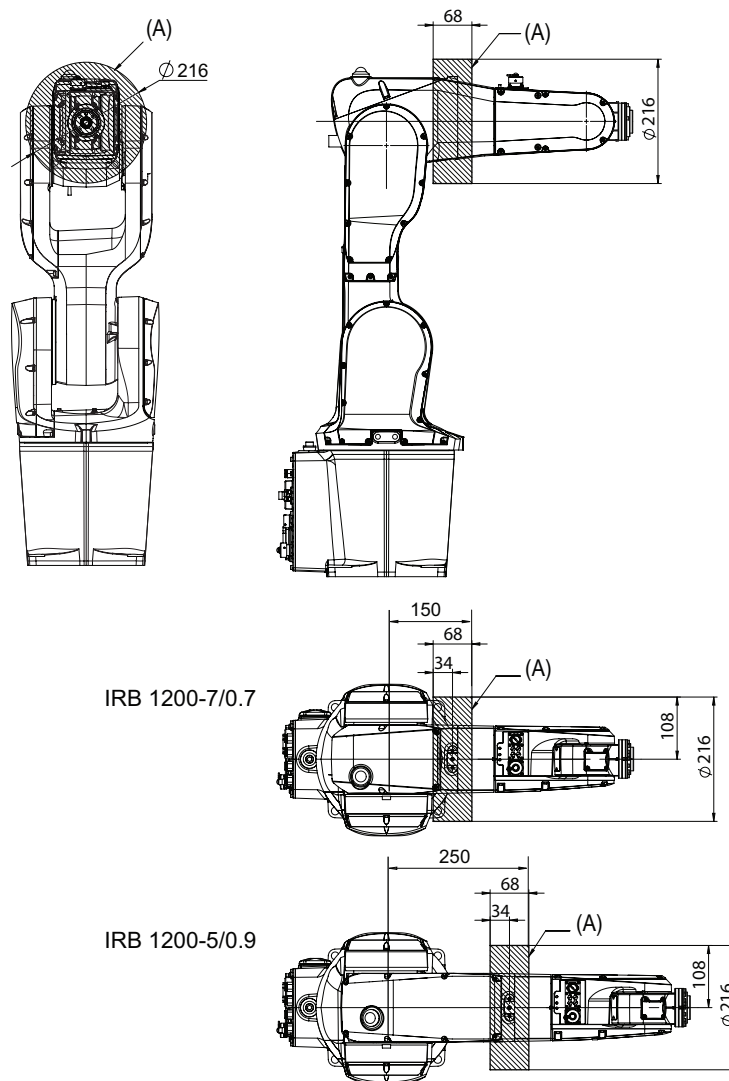

xx1300000384


| Load area (A) | Max load |
|----------------|----------|
| IRB 1200-5/0.9 | 0.3 kg |
| IRB 1200-7/0.7 | |

1 Description

1.5.2 Holes for fitting extra equipment

1.5.2 Holes for fitting extra equipment

Upper arm

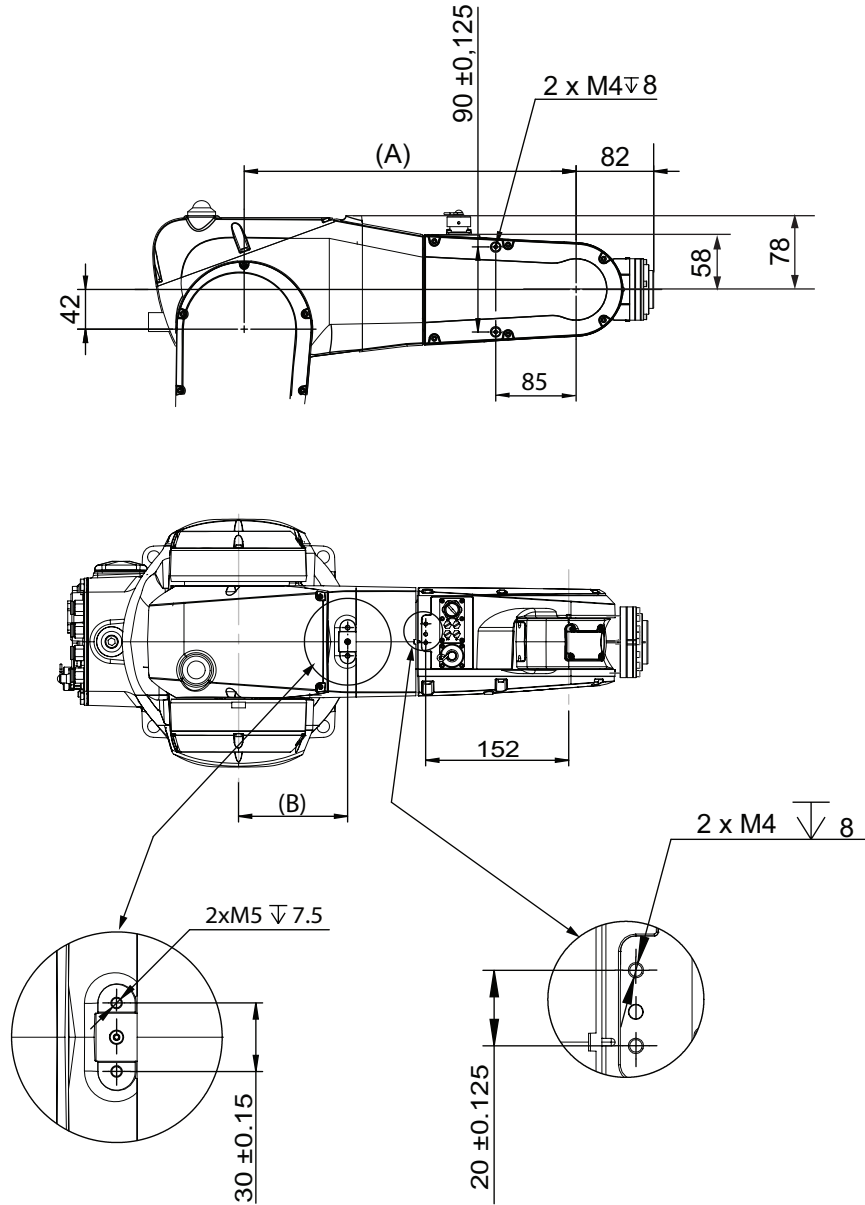

xx1300000381


| Pos | Description |
|-----|--|
| A | IRB 1200-5/0.9 = 451 mm, IRB 1200-7/0.7 = 351 mm |
| B | IRB 1200-5/0.9 = 216 mm, IRB 1200-7/0.7 = 116 mm |

Continues on next page



Note

The two M4 thread holes shown in the following figure are used for fitting the cable harness or air hoses of the tools rather than fitting extra equipment.

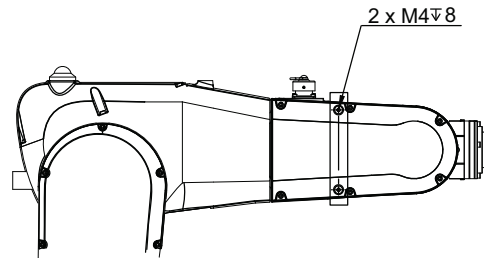


xx1700002331

1 Description

1.5.2 Holes for fitting extra equipment

Continued

Upper arm for Hygienic robots

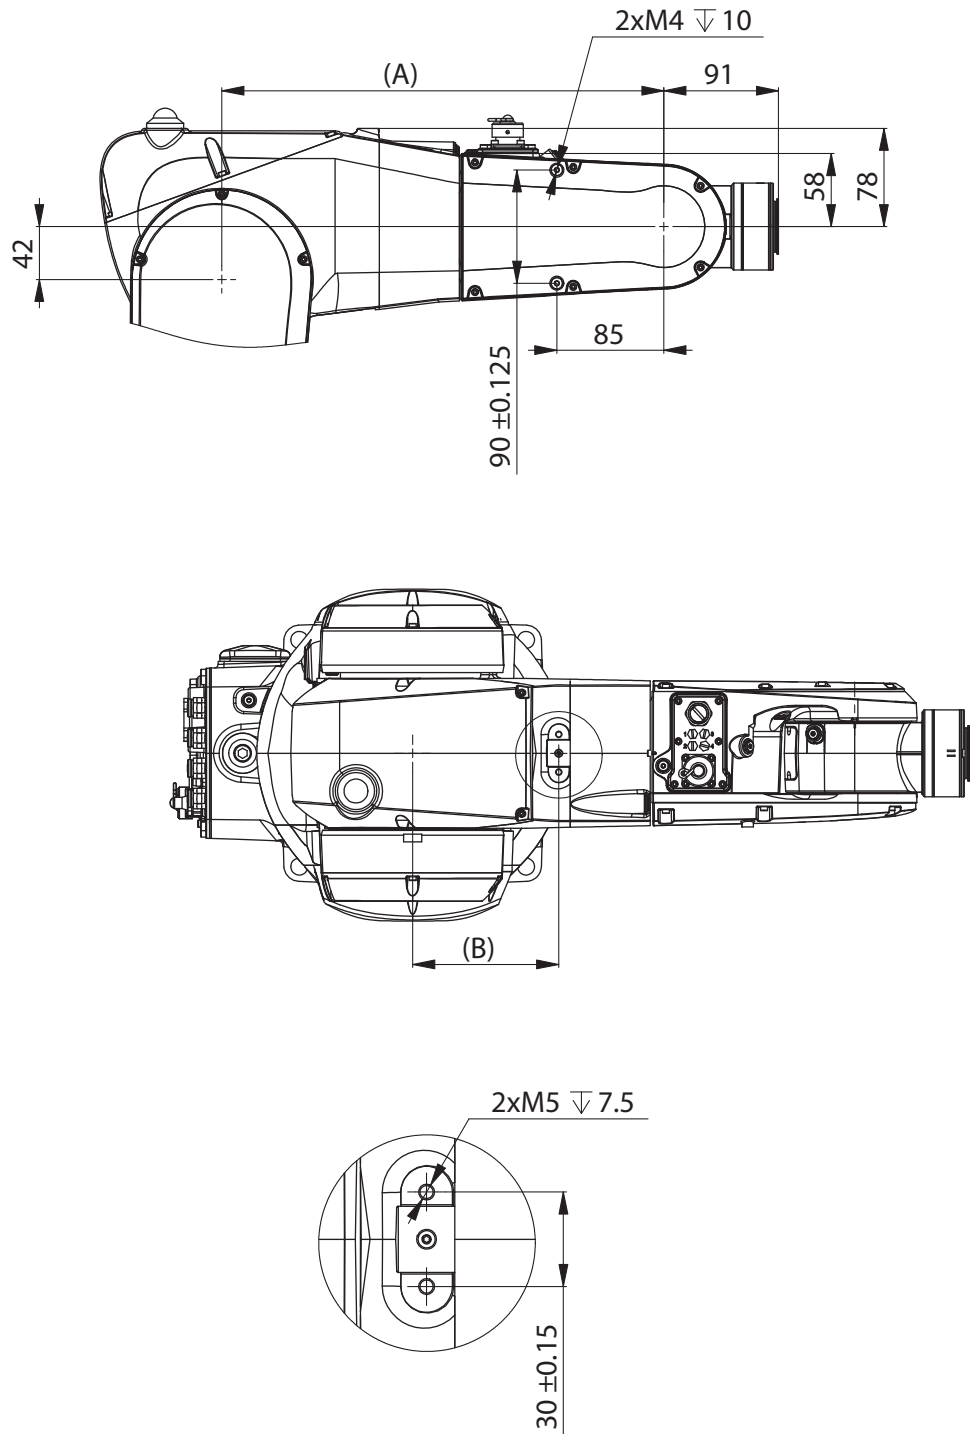

xx2100001279


| Pos | Description |
|-----|--|
| A | IRB 1200-5/0.9 = 451 mm, IRB 1200-7/0.7 = 351 mm |
| B | IRB 1200-5/0.9 = 216 mm, IRB 1200-7/0.7 = 116 mm |

Continues on next page




Note

The two M4 thread holes shown in the following figure are used for fitting the cable harness or air hoses of the tools rather than fitting extra equipment.

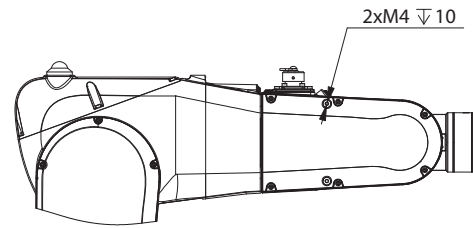

xx2100001280

Lower arm

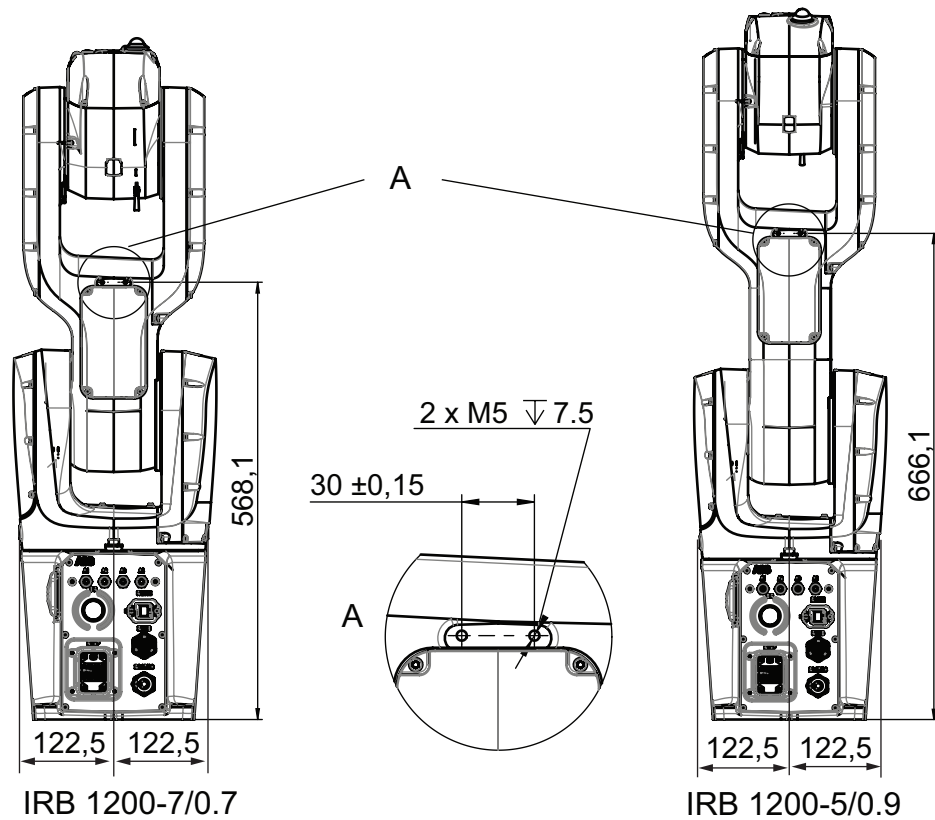

xx1300000382


Continues on next page

1 Description

1.5.2 Holes for fitting extra equipment

Continued


Frame

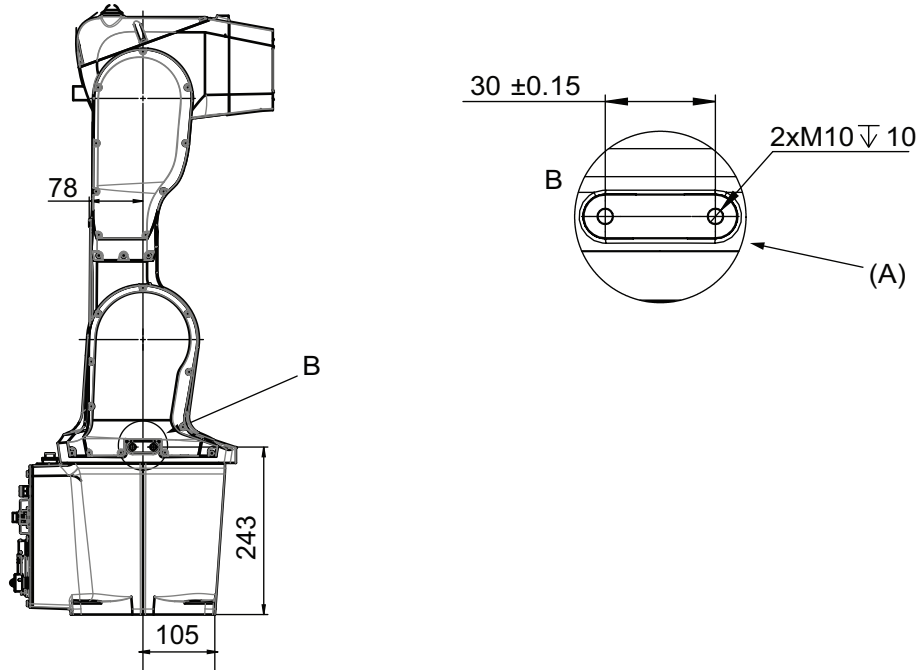

xx140000590

| Pos | Description |
|-----|---------------------|
| A | Holes on both sides |


Robot tool flange

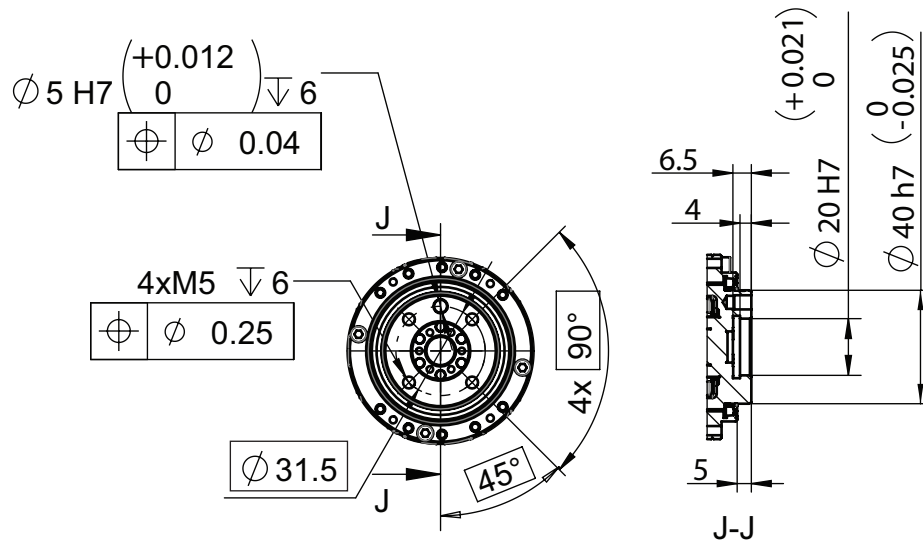

xx130000383

Continues on next page

Robot tool flange for Foundry Plus robots

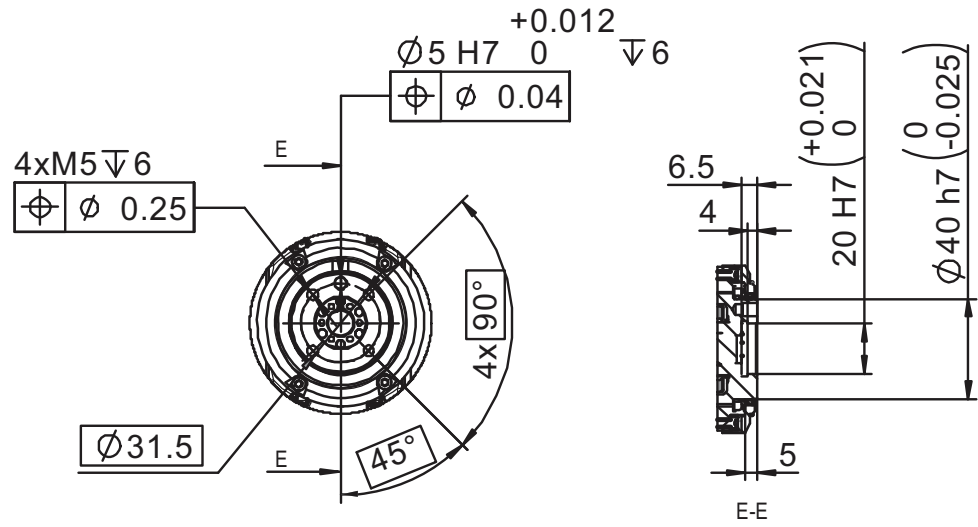

xx1600001322


Continues on next page

1 Description

1.5.2 Holes for fitting extra equipment

Continued

Robot tool flange for Hygienic robots

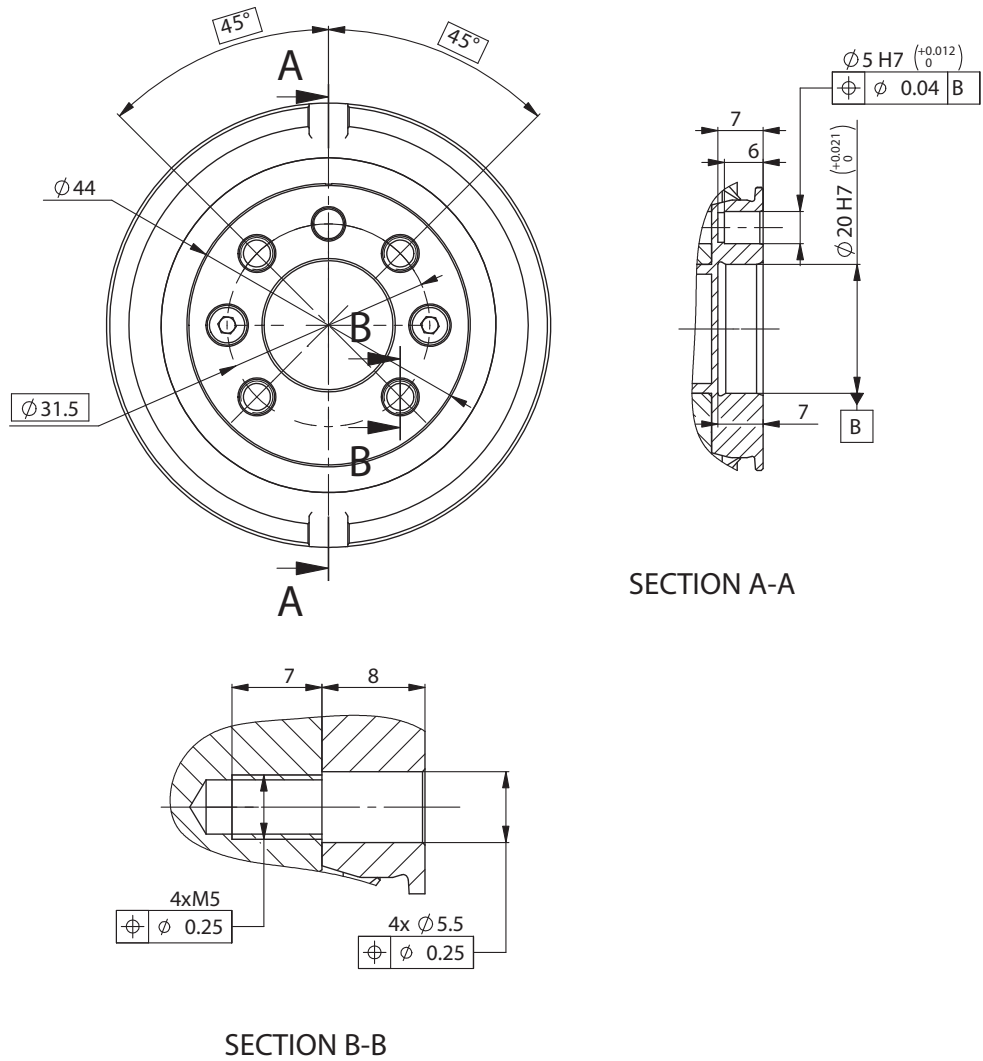

xx2100001281

Fastener quality

When fitting tools on the tool flange, only use screws with quality 12.9. For other equipment use suitable screws and tightening torque for your application.

1.6 Calibration

1.6.1 Calibration methods


Overview

This section specifies the different types of calibration and the calibration methods that are supplied by ABB.

The original calibration data delivered with the robot is generated when the robot is floor mounted. If the robot is not floor mounted, then the robot accuracy could be affected. The robot needs to be calibrated after it is mounted.

More information is available in the product manual.

Types of calibration

| Type of calibration | Description | Calibration method |
|--|--|---|
| Standard calibration | <p>The calibrated robot is positioned at calibration position.</p> <p>Standard calibration data is found on the SMB (serial measurement board) or EIB in the robot.</p> <p>For robots with RobotWare 5.04 or older, the calibration data is delivered in a file, calib.cfg, supplied with the robot at delivery. The file identifies the correct resolver/motor position corresponding to the robot home position.</p> | Axis Calibration or manual calibration ⁱ |
| Absolute accuracy calibration (optional) | <p>Based on standard calibration, and besides positioning the robot at synchronization position, the Absolute accuracy calibration also compensates for:</p> <ul style="list-style-type: none"> • Mechanical tolerances in the robot structure • Deflection due to load <p>Absolute accuracy calibration focuses on positioning accuracy in the Cartesian coordinate system for the robot.</p> <p>Absolute accuracy calibration data is found on the SMB (serial measurement board) in the robot.</p> <p>For robots with RobotWare 5.05 or older, the absolute accuracy calibration data is delivered in a file, absacc.cfg, supplied with the robot at delivery. The file replaces the calib.cfg file and identifies motor positions as well as absolute accuracy compensation parameters.</p> <p>A robot calibrated with Absolute accuracy has a sticker next to the identification plate of the robot.</p> <p>To regain 100% Absolute accuracy performance, the robot must be recalibrated for absolute accuracy after repair or maintenance that affects the mechanical structure.</p> <div style="border: 1px solid black; padding: 5px; margin-top: 10px;">  <p style="text-align: center; margin: 0;">ABSOLUTE ACCURACY</p> <p style="text-align: right; font-size: small; margin: 0;">3HAC 14257-1</p> </div> <p style="font-size: x-small; margin-top: 5px;">xx0400001197</p> | CalibWare |

Continues on next page

1 Description

1.6.1 Calibration methods

Continued

| Type of calibration | Description | Calibration method |
|---------------------|---|--------------------|
| Optimization | Optimization of TCP reorientation performance. The purpose is to improve reorientation accuracy for continuous processes like welding and gluing. Wrist optimization will update standard calibration data for axes 4 and 5. | Wrist Optimization |

- i The robot is calibrated by either manual calibration or Axis Calibration at factory. Always use the same calibration method as used at the factory.
Information about valid calibration method is found on the calibration label or in the calibration menu on the FlexPendant.
If no data is found related to standard calibration, manual calibration is used as default.

Brief description of calibration methods

Axis Calibration method

Axis Calibration is a standard calibration method for calibration of IRB 1200. It is the recommended method in order to achieve proper performance.

The following routines are available for the Axis Calibration method:

- Fine calibration
- Update revolution counters
- Reference calibration

The calibration equipment for Axis Calibration is delivered as a toolkit.

The actual instructions of how to perform the calibration procedure and what to do at each step is given on the FlexPendant. You will be guided through the calibration procedure, step by step.

Wrist Optimization method

Wrist Optimization is a method for improving reorientation accuracy for continuous processes like welding and gluing and is a complement to the standard calibration method.

The following routines are available for the Wrist Optimization method:

- Wrist Optimization

The actual instructions of how to perform the calibration procedure and what to do at each step is given on the FlexPendant. You will be guided through the calibration procedure, step by step.

Manual calibration method

With the manual calibration method, the robot's axes are positioned in specific calibration positions using calibration tools. Under this condition, the position of the axis to be calibrated is pre-determined. The axes must be calibrated one at a time.

CalibWare - Absolute Accuracy calibration

The CalibWare tool guides through the calibration process and calculates new compensation parameters. This is further detailed in the *Application manual - CalibWare Field*.

If a service operation is done to a robot with the option Absolute Accuracy, a new absolute accuracy calibration is required in order to establish full performance.

Continues on next page

For most cases after replacements that do not include taking apart the robot structure, standard calibration is sufficient.


1 Description

1.6.2 Fine calibration

1.6.2 Fine calibration

General

Fine calibration is made by moving the axes to a fixed position on the frame. For detailed information on calibration of the robot see *Product manual - IRB 1200*.

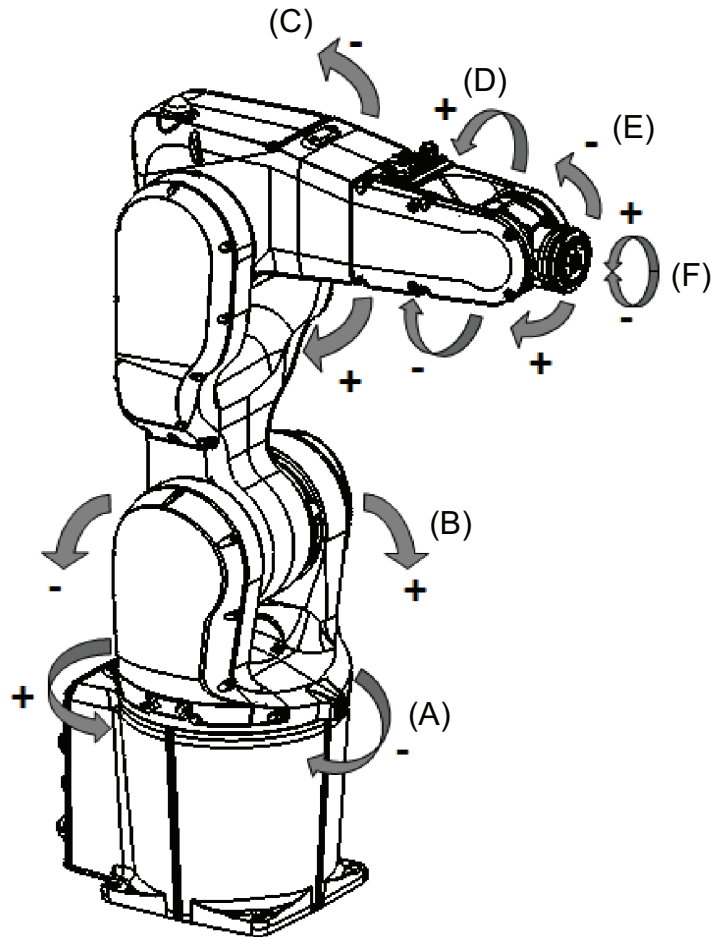

xx130000365

| Position | Description | Position | Description |
|----------|-------------|----------|-------------|
| A | Axis 1 | B | Axis 2 |
| C | Axis 3 | D | Axis 4 |
| E | Axis 5 | F | Axis 6 |

1.6.3 Absolute Accuracy calibration

Purpose

Absolute Accuracy is a calibration concept that improves TCP accuracy. The difference between an ideal robot and a real robot can be several millimeters, resulting from mechanical tolerances and deflection in the robot structure. *Absolute Accuracy* compensates for these differences.

Here are some examples of when this accuracy is important:


- Exchangeability of robots
- Offline programming with no or minimum touch-up
- Online programming with accurate movement and reorientation of tool
- Programming with accurate offset movement in relation to eg. vision system or offset programming
- Re-use of programs between applications

The option *Absolute Accuracy* is integrated in the controller algorithms and does not need external equipment or calculation.



Note

The performance data is applicable to the corresponding RobotWare version of the individual robot.

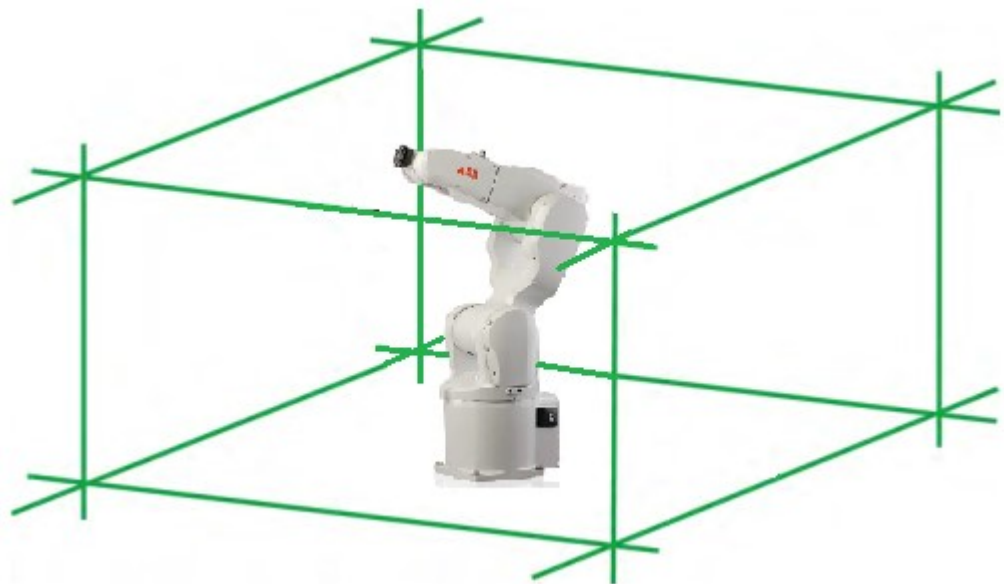

xx170000069

What is included

Every *Absolute Accuracy* robot is delivered with:

- compensation parameters saved on the robot's serial measurement board
- a birth certificate representing the *Absolute Accuracy* measurement protocol for the calibration and verification sequence.

Continues on next page

1 Description

1.6.3 Absolute Accuracy calibration

Continued

A robot with *Absolute Accuracy* calibration has a label with this information on the manipulator.

Absolute Accuracy supports floor mounted, wall mounted and ceiling mounted installations. Compensation parameters saved in the robot's serial measurement board differ depending on which Absolute Accuracy option is selected.

When is *Absolute Accuracy* being used

Absolute Accuracy works on a robot target in Cartesian coordinates, not on the individual joints. Therefore, joint based movements (e.g. `MoveAbsJ`) will not be affected.

If the robot is inverted, the Absolute Accuracy calibration must be performed when the robot is inverted.

Absolute Accuracy active

Absolute Accuracy will be active in the following cases:

- Any motion function based on robtargets (e.g. `MoveL`) and ModPos on robtargets
- Reorientation jogging
- Linear jogging
- Tool definition (4, 5, 6 point tool definition, room fixed TCP, stationary tool)
- Work object definition

Absolute Accuracy not active

The following are examples of when Absolute Accuracy is not active:

- Any motion function based on a jointtarget (`MoveAbsJ`)
- Independent joint
- Joint based jogging
- Additional axes
- Track motion



Note

In a robot system with, for example, an additional axis or track motion, the Absolute Accuracy is active for the manipulator but not for the additional axis or track motion.

RAPID instructions

There are no RAPID instructions included in this option.

Production data

Typical production data regarding calibration are:

| Robot | Positioning accuracy (mm) | | |
|---------------|---------------------------|------|---------------|
| | Average | Max | % Within 1 mm |
| IRB1200-7/0.7 | 0.13 | 0.30 | 100 |
| IRB1200-5/0.9 | 0.14 | 0.45 | 100 |

1.7 Maintenance and troubleshooting

1.7.1 Introduction to maintenance and trouble shooting

General

The robot requires only a minimum of maintenance during operation. It has been designed to make it as easy to service as possible:

- Maintenance-free AC motors are used.
- Grease used for all gearboxes.
- The cabling is routed for longevity, and in the unlikely event of a failure, its modular design makes it easy to change.

Maintenance

The maintenance intervals depend on the use of the robot, the required maintenance activities also depends on selected options. For detailed information on maintenance procedures, see *Maintenance* section in the *Product Manual - IRB 1200*.

1 Description

1.8.1 Working range and type of motion

1.8 Robot motion

1.8.1 Working range and type of motion

Robot motion

| Location of motion | Type of motion | IRB 1200-7/0.7 | IRB 1200-5/0.9 |
|--------------------|-----------------|--|--|
| Axis 1 | Rotation motion | +170° to -170° | +170° to -170° |
| Axis 2 | Arm motion | +135° to -100° | +130° to -100° |
| Axis 3 | Arm motion | +70° to -200° | +70° to -200° |
| Axis 4 | Wrist motion | +270° to -270° | +270° to -270° |
| Axis 5 | Bend motion | ±130° (not Hygienic robots) ±128° (Hygienic robots) | ±130° (not Hygienic robots) ±128° (Hygienic robots) |
| Axis 6 | Turn motion | Default: +400° to -400° Maximum revolution: ±242 ⁱ | Default: +400° to -400° Maximum revolution: ±242 ⁱ |


ⁱ The default working range for axis 6 can be extended by changing parameter values in the software. Option Independent axis can be used for resetting the revolution counter after the axis has been rotated (no need for "rewinding" the axis).

Continues on next page

Working range

IRB 1200-7/0.7 Working range, positions at wrist center and angle of axes 2 and 3

The illustration shows the unrestricted working range of the robot.

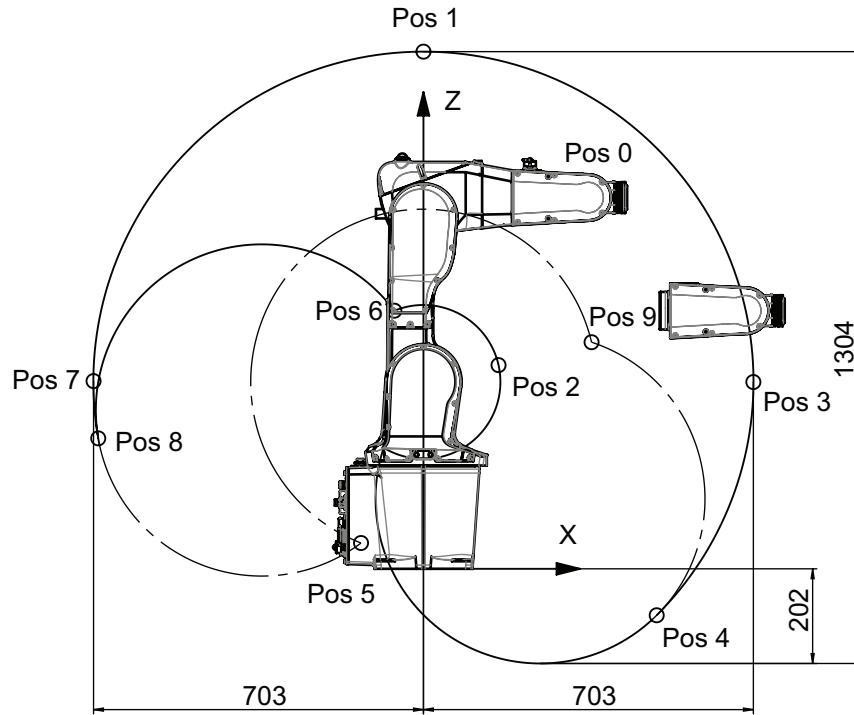

xx130000386

| Position in the figure | Positions at wrist center (mm) | | Angle (degrees) | |
|------------------------|--------------------------------|------|-----------------|--------|
| | X | Z | Axis 2 | Axis 3 |
| Pos0 | 351 | 791 | 0° | 0° |
| Pos1 | 0 | 1102 | 0° | -83° |
| Pos2 | 160 | 434 | 0° | +70° |
| Pos3 | 703 | 398 | +90° | -83° |
| Pos4 | 497 | -99 | +135° | -83° |
| Pos5 | -133 | 55 | -100° | -200° |
| Pos6 | -62 | 550 | -100° | +70° |
| Pos7 | -703 | 400 | -90° | -83° |
| Pos8 | -693 | 278 | -100° | -83° |
| Pos9 | 358 | 488 | +135° | -200° |

Continues on next page


1 Description

1.8.1 Working range and type of motion

Continued

IRB 1200-5/0.9 Working range, positions at wrist center and angle of axes 2 and 3

The illustration shows the unrestricted working range of the robot.

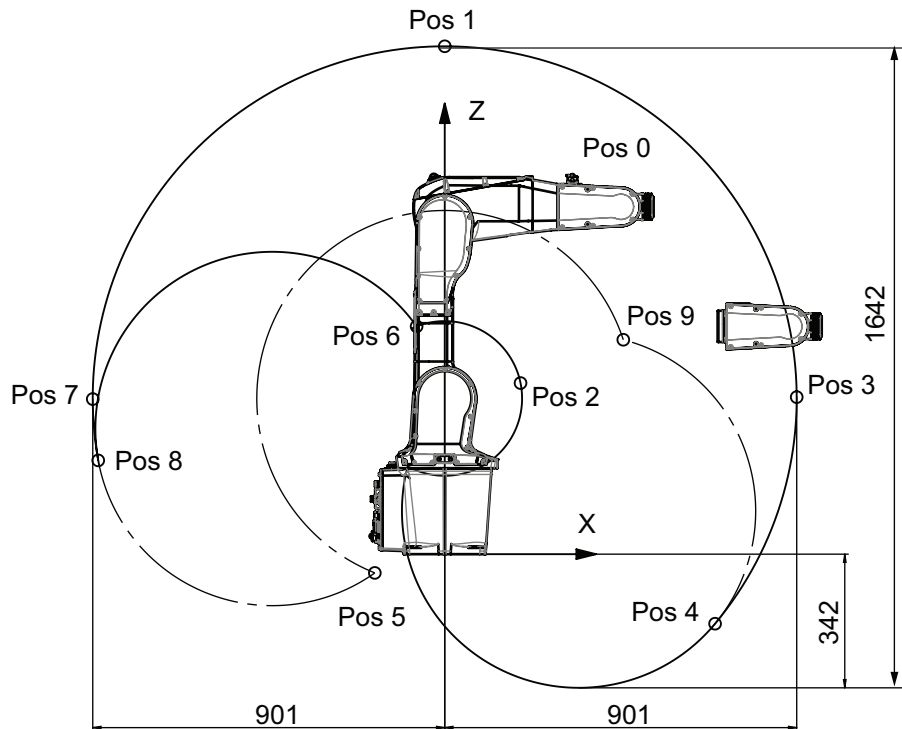

xx1300000387


| Position in the figure | Positions at wrist center (mm) | | Angle (degrees) | |
|------------------------|--------------------------------|------|-----------------|--------|
| | X | Z | Axis 2 | Axis 3 |
| Pos0 | 451 | 889 | 0° | 0° |
| Pos1 | 0 | 1300 | 0° | -85° |
| Pos2 | 194 | 438 | 0° | +70° |
| Pos3 | 901 | 402 | +90° | -85° |
| Pos4 | 692 | -178 | +130° | -85° |
| Pos5 | -179 | -48 | -100° | -200° |
| Pos6 | -72 | 583 | -100° | +70° |
| Pos7 | -901 | 397 | -90° | -85° |
| Pos8 | -887 | 240 | -100° | -85° |
| Pos9 | 458 | 549 | +130° | -200° |

1.8.2 Performance according to ISO 9283

General

At rated maximum load, maximum offset and 1.6 m/s velocity on the inclined ISO test plane, with all six axes in motion. Values in the table below are the average result of measurements on a small number of robots. The result may differ depending on where in the working range the robot is positioning, velocity, arm configuration, from which direction the position is approached, the load direction of the arm system. Backlashes in gearboxes also affect the result.

The figures for AP, RP, AT and RT are measured according to figure below.

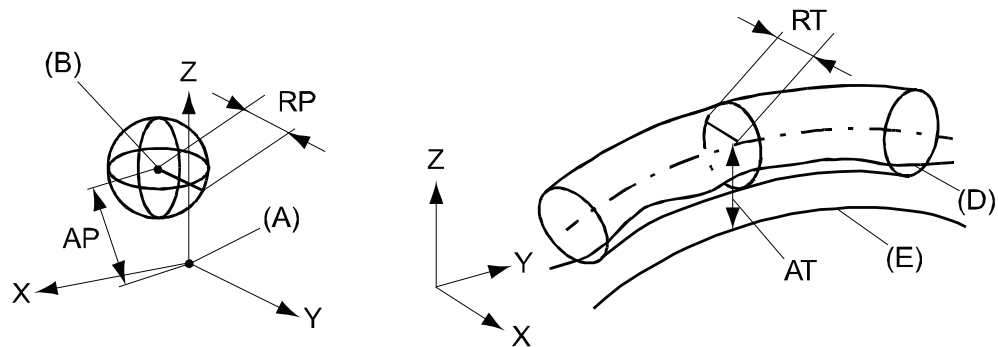

xx080000424

| Position | Description | Position | Description |
|----------|---|----------|---|
| A | Programmed position | E | Programmed path |
| B | Mean position at program execution | D | Actual path at program execution |
| AP | Mean distance from programmed position | AT | Max deviation from E to average path |
| RP | Tolerance of position B at repeated positioning | RT | Tolerance of the path at repeated program execution |

| Description | Values | |
|--|------------------|----------------|
| | IRB 1200 - 5/0.9 | IRB 1200-7/0.7 |
| Pose repeatability, RP (mm) | 0.025 | 0.02 |
| Pose accuracy, AP (mm) | 0.02 | 0.02 |
| Linear path repeatability, RT (mm) | 0.07 | 0.02 |
| Linear path accuracy, AT (mm) | 0.53 | 0.77 |
| Pose stabilization time, Pst (s) within 0.1 mm of the position | 0.113 | 0.057 |

1 Description

1.8.3 Velocity

1.8.3 Velocity

3-phase power supply

| Axis number | IRB 1200-5/0.9 | IRB 1200-7/0.7 | with Hygienic option |
|-------------|----------------|----------------|----------------------|
| 1 | 288°/s | 288°/s | 280°/s |
| 2 | 240°/s | 240°/s | 230°/s |
| 3 | 297°/s | 297°/s | 290°/s |
| 4 | 400°/s | 400°/s | 380°/s |
| 5 | 405°/s | 405°/s | 380°/s |
| 6 | 600°/s | 600°/s | 600°/s |

1-phase power supply

When the robot uses a single phase power supply, like with IRC5 Compact controller, the performance regarding max axis speed is reduced, see table below. The reduced top speed can be increased if the power supply minimum voltage is higher than the default setting 187 V (220x0.85). See the system parameter *Mains tolerance min*, in *Technical reference manual - System parameters*.

Note that the robot acceleration is not affected by the single phase power supply. The cycle time may not be affected at all. RobotStudio can be used to test the cycle. The parameter *Mains tolerance min* can also be modified in RobotStudio.

| Axis number | IRB 1200-5/0.9 | IRB 1200-7/0.7 | with Hygienic option |
|-------------|----------------|----------------|----------------------|
| 1 | 288°/s | 288°/s | 280°/s |
| 2 | 240°/s | 240°/s | 230°/s |
| 3 | 297°/s | 297°/s | 290°/s |
| 4 | 376°/s | 378°/s | 380°/s |
| 5 | 399°/s | 405°/s | 380°/s |
| 6 | 600°/s | 600°/s | 600°/s |

1.8.4 Robot stopping distances and times

Introduction

The stopping distances and times for category 0 and category 1 stops, as required by EN ISO 10218-1 Annex B, are listed in *Product specification - Robot stopping distances according to ISO 10218-1 (3HAC048645-001)*.

1 Description


1.9 Customer connections

1.9 Customer connections

Introduction to customer connections

The cables for customer connection are integrated in the robot and the connectors are placed on the tubular housing (upper arm) and one at the base. There is one connector R4.CP/CS at the tubular housing. Corresponding connector R1.CP/CS is located at the base.

It is recommended to use a fuse protector for customer connection; otherwise, application overload will burn out the CP/CS cables in the robot. Detailed information about the CP/CS connection is provided in a warning label on the tubular housing.

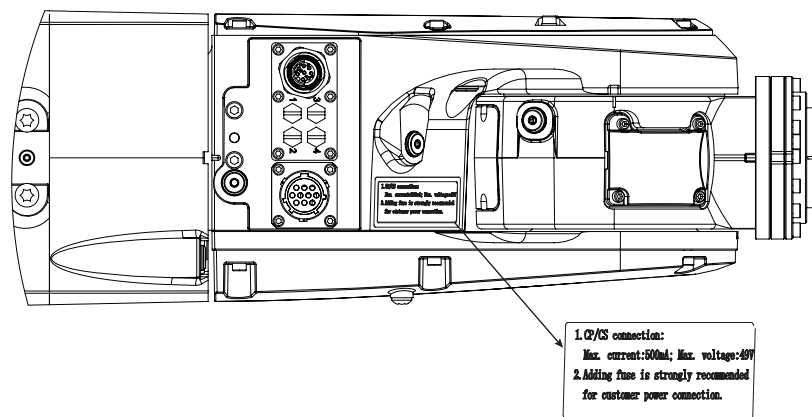


xx1600001687

There is also connections for Ethernet, one connector R4.Ethernet at the tubular housing and the corresponding connector R1.Ethernet located at the base.

Continues on next page

Hose for compressed air is also integrated into the manipulator. There are 4 inlets (R1/8") and 4 outlets (M5) on the tubular housing.

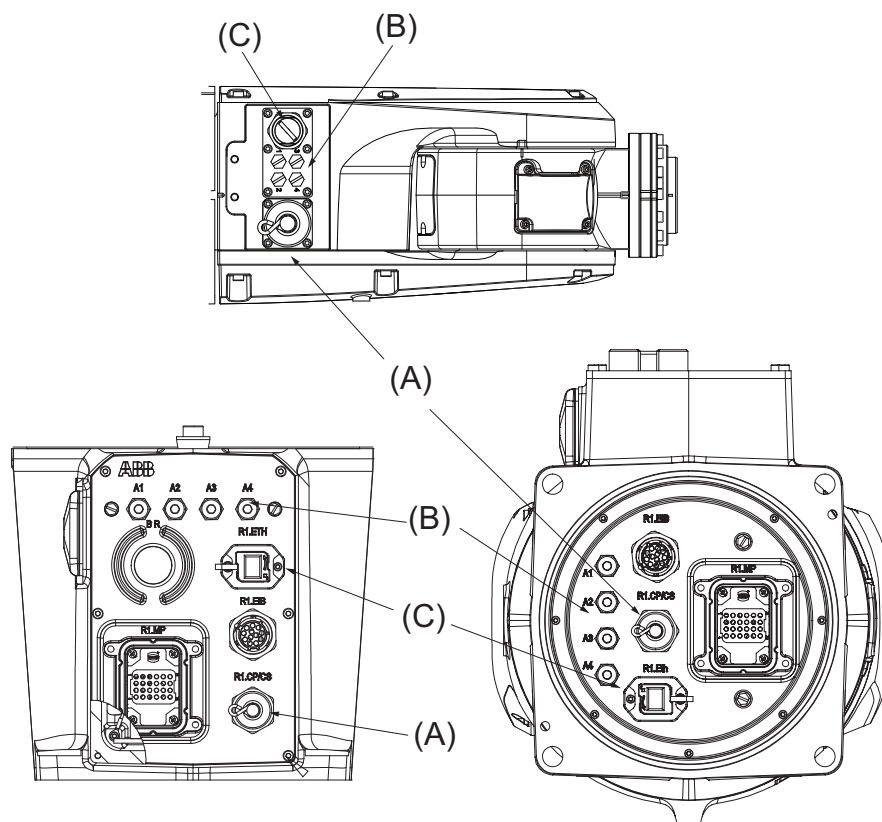

xx130000385

| Position | Connection | Description | Number | Value |
|----------|-----------------|-----------------------|--------|----------------------------------|
| A | (R1)R4.CP/CS | Customer power/signal | 10 | 49 V, 500 mA |
| B | Air | Max. 5 bar | 4 | Outer diameter of air hose: 4 mm |
| C | (R1)R4.Ethernet | Customer Ethernet | 8 | 100/10 Base-TX |

Connectors

The tables describes the connectors on base and tubular housing (upper arm).

Connectors, base

| Position | Description | Art. no. |
|--------------------|-----------------------------|----------------|
| Robot | Pin connector 10p, bulkhead | 3HAC022117-002 |
| Customer connector | Connector set R1.CP/CS | 3HAC037038-001 |

Connectors, tubular housing

| Position | Description | Art. no. |
|--------------------|--------------------------------------|----------------|
| Robot | Socket connector 10p, flange mounted | 3HAC023624-002 |
| Customer connector | Connector set R3.CP/CS | 3HAC037070-001 |

Continues on next page

1 Description

1.9 Customer connections

Continued

Air, connector

| Position | Description | Art. no. |
|----------------|---------------|----------------|
| Robot | 4xM5 | |
| Customer cable | Air connector | 3HAC032049-001 |

2 Specification of variants and options

2.1 Manipulator

General

The different variants and options for the IRB 1200 are described in the following sections. The same option numbers are used here as in the specification form.

The variants and options related to the robot controller are described in the product specification for the controller.

Manipulator variant [435]

| Option | Handling capacity (kg) | Reach (m) |
|---------|------------------------|-----------|
| 435-121 | 7 kg | 0.7 m |
| 435-122 | 5 kg | 0.9 m |

Manipulator color [209]

General

The color of ABB robots is not limited to orange, white or graphite white. Select one of the roughly 200 colors of the RAL CLASSIC scheme. See predefined list of colors with option numbers.



Note

Notice that delivery time for painted spare parts will increase for none standard colors.

Colors

| Option | Color | RAL code |
|---------|-------------------------------------|----------|
| 209-1 | ABB Orange | RAL7032 |
| 209-2 | ABB White | RAL 9003 |
| 209-202 | ABB Graphite White (Standard color) | RAL7035 |
| 209-4 | Green beige | RAL1000 |
| 209-5 | Beige | RAL1001 |
| 209-6 | Sand yellow | RAL1002 |
| 209-7 | Signal yellow | RAL1003 |
| 209-8 | Golden yellow | RAL1004 |
| 209-9 | Honey yellow | RAL1005 |
| 209-10 | Maize yellow | RAL1006 |
| 209-11 | Daffodil yellow | RAL1007 |
| 209-12 | Brown beige | RAL1008 |
| 209-13 | Lemon yellow | RAL1009 |

Continues on next page

2 Specification of variants and options

2.1 Manipulator *Continued*

Protection [287]

Clean Room [287-1]

The Clean Room classification ISO 14644-1 is according to IPA.

Clean room robots are designed in order to prevent from particle emission from the robot. For example is, frequent maintenance work possible to perform without cracking the paint. The robot is painted with four layers of polyurethane paint. The last layer being a varnish over labels in order to simplify cleaning. The paint has been tested regarding outgassing of Volatile Organic Compounds (VOC) and been classified in accordance with ISO 14644-8.

- Class 5 according to ISO 14644-1, when operated at a capacity of 50%.
- Class 4 according to ISO 14644-1, when operated at a capacity of 100%.
- Clean Room always in white color.



xx1100000959

Foundry Plus 2 [287-3]

ABB Foundry Plus 2 makes your entire robot IP67 compliant, from base to wrist meaning that the electrical compartments are sealed against liquid and solid contaminants. But it takes more than IP67 to ensure long-term trouble-free operation and long service life.

ABB Foundry Plus 2 robots are unique due to their improved resistance to corrosion and capability to withstand high pressure steam washing. No other foundry robots are up to this task today. See [Protection type Foundry Plus 2 on page 10](#) for a complete description.

Standard [287-4]

Standard protection IP40.

IP66/67 [287-10]

The robot has IP67 as an option. The option will add sealing, machining parts and gasket.

Hygienic [287-13]



Note

This option requires option 777-1 and 287-10.

The robot has Hygienic as an option. Robots with the option Hygienic are equipped with special sealings and coatings, and a special axes 6 stainless steel body and tool flange.

Continues on next page

Warranty

Description

For the selected period of time, ABB will provide spare parts and labour to repair or replace the non-conforming portion of the equipment without additional charges. During that period, it is required to have a yearly Preventative Maintenance according to ABB manuals to be performed by ABB. If due to customer restrains no data can be analyzed in the ABB Ability service *Condition Monitoring & Diagnostics* for robots with OmniCore controllers, and ABB has to travel to site, travel expenses are not covered. The Extended Warranty period always starts on the day of warranty expiration. Warranty Conditions apply as defined in the Terms & Conditions.



Note

This description above is not applicable for option *Stock warranty* [438-8]

| Option | Type | Description |
|--------|-------------------------------|--|
| 438-1 | Standard warranty | Standard warranty is 12 months from <i>Customer Delivery Date</i> or latest 18 months after <i>Factory Shipment Date</i> , whichever occurs first. Warranty terms and conditions apply. |
| 438-2 | Standard warranty + 12 months | Standard warranty extended with 12 months from end date of the standard warranty. Warranty terms and conditions apply. Contact Customer Service in case of other requirements. |
| 438-4 | Standard warranty + 18 months | Standard warranty extended with 18 months from end date of the standard warranty. Warranty terms and conditions apply. Contact Customer Service in case of other requirements. |
| 438-5 | Standard warranty + 24 months | Standard warranty extended with 24 months from end date of the standard warranty. Warranty terms and conditions apply. Contact Customer Service in case of other requirements. |
| 438-6 | Standard warranty + 6 months | Standard warranty extended with 6 months from end date of the standard warranty. Warranty terms and conditions apply. |
| 438-7 | Standard warranty + 30 months | Standard warranty extended with 30 months from end date of the standard warranty. Warranty terms and conditions apply. |
| 438-8 | Stock warranty | <p>Maximum 6 months postponed start of standard warranty, starting from factory shipment date. Note that no claims will be accepted for warranties that occurred before the end of stock warranty. Standard warranty commences automatically after 6 months from <i>Factory Shipment Date</i> or from activation date of standard warranty in WebConfig.</p> <div data-bbox="826 1803 888 1863" data-label="Image"> </div> <div data-bbox="909 1814 978 1848" data-label="Section-Header"> <h4>Note</h4> </div> <div data-bbox="820 1868 1453 1928" data-label="Text"> <p>Special conditions are applicable, see <i>Robotics Warranty Directives</i>.</p> </div> |

Continues on next page

2 Specification of variants and options

2.1 Manipulator

Continued

Food grade lubrication [777-1]



Note

This option requires option 287-1 or 287-13.

The robot has food grade lubrication (NSF H1) as an option. The protection type for robots with food grade lubrication is Clean Room and IP67.

Media & communication

Parallel & Air [803-1]



Note

The option is not possible to select with 287-13.

Parallel communication and air.

Includes:

- customer power/signal CP/CS
- customer air

EtherNet, Parallel & Air [803-2]

Ethernet, parallel communication and air.

Includes:

- customer power/signal CP/CS
- customer air
- PROFINET, EtherNet/IP™

Connector kits

Connector kit [431-1]

For the connectors on the upper arm, customer connection.

To simplify making customer cable for external equipment, the option connector kits, consists of connectors, pins and sockets fitting customer power (CP) and customer signals (CS) located on the upper arm.

Connector kit [239-1]


For the connectors on the foot.

To simplify making customer cable for external equipment, the option connector kits, consists of connectors, pins and sockets fitting customer power (CP) and customer signals (CS) located on the base.

Continues on next page

Safety lamp [213-1]

A safety lamp with an orange fixed light can be mounted on the manipulator. The lamp is active in MOTORS ON mode. The safety lamp is required on a UL/UR approved robot.

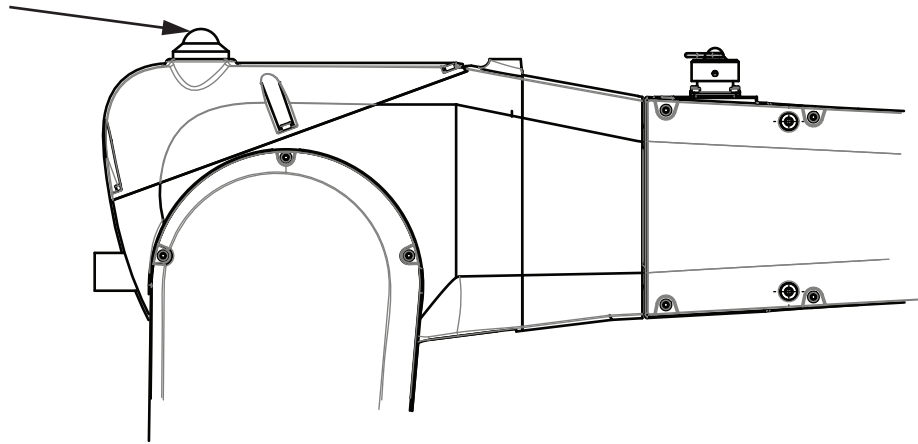


xx130000389

Robot cabling routing

Under the base [966-1]

Manipulator cables routed from below, underneath the base of the manipulator.

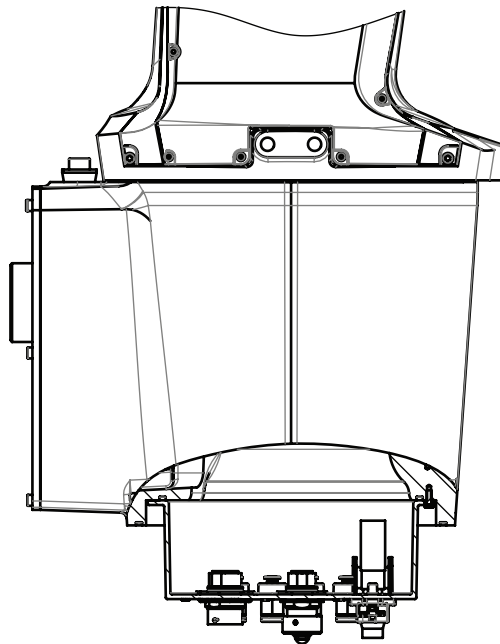

xx130000388

This page is intentionally left blank

3 Accessories

3.1 Introduction to accessories

General

There is a range of tools and equipment available.

Basic software and software options for robot and PC

For more information, see *Product specification - Controller IRC5* and *Application manual - Controller software IRC5*.

Robot peripherals

- Motor Units¹

¹ Not applicable for IRC5 Compact controller.

This page is intentionally left blank

Index

A

Absolute Accuracy, 45
Absolute Accuracy, calibration, 42
accessories, 63

C

calibration
 Absolute Accuracy type, 41
 standard type, 41
calibration, Absolute Accuracy, 42
CalibWare, 41
category 0 stop, 53
category 1 stop, 53
compensation parameters, 45

E

equipment on robot, fitting, 34

F

fitting
 extra equipment, 34

P

product standards, 18
protection classes, 21
protection type, 21

R

robot
 protection class, 21
 protection types, 21

S

safety standards, 18
standards, 18
 ANSI, 18
 CAN, 18
 EN IEC, 18
 EN ISO, 18
stopping distances, 53
stopping times, 53

W

weight, 13



ABB AB

Robotics & Discrete Automation

S-721 68 VÄSTERÅS, Sweden

Telephone +46 (0) 21 344 400

ABB AS

Robotics & Discrete Automation

Nordlysvegen 7, N-4340 BRYNE, Norway

Box 265, N-4349 BRYNE, Norway

Telephone: +47 22 87 2000

ABB Engineering (Shanghai) Ltd.

Robotics & Discrete Automation

No. 4528 Kangxin Highway

PuDong District

SHANGHAI 201319, China

Telephone: +86 21 6105 6666

ABB Inc.

Robotics & Discrete Automation

1250 Brown Road

Auburn Hills, MI 48326

USA

Telephone: +1 248 391 9000

abb.com/robotics